

0.1.w

Multi-function Compact Inverter

# **MX2-Series V1 type**

Born to drive machines

» Permanent magnet motors
» EtherCAT<sup>®</sup>
» Built-in safety



# Harmonised motor and machine control






# Amazing in Control

High starting torque and torque control capability in open loop mode give you full control of your machine dynamics and performance. Options for all of the major open network systems.

#### **Torque master**

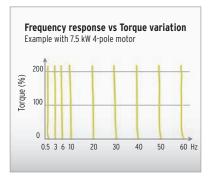

The MX2-V1 delivers 200% starting torque near stand-still (0.5 Hz) and can operate in torque control in open loop mode. This allows the MX2-V1 to be used in applications where closed loop AC vector drives were previously used.

#### Easy network integration



Standard industrial networks, such as EtherCAT, CompoNet or DeviceNet as options. High-speed EtherCAT provides solutions for the entire system from input to output with Sysmac Series.

#### Easy communications setting



Built-in RS-485 Modbus communications. OMRON Function Blocks are available for the CP H/L and CJ-series PLCs. Those control the MX2-V1 via Modbus communications easily.

# Safety in Control

Safety is embedded in the MX2-V1, according to ISO 13849-1, Cat. 3, with two safety inputs and an External Device Monitoring (EDM) output. No external contactors on the motor side are required, meaning simpler wiring for the user.

#### Safety embedded; ISO 13849-1, Cat. 3



Dual contactors at the output of the inverter are no longer required. Direct connection to a safety controller ensures compliance to ISO 13849-1 Cat.3 PLd. Safety function: IEC 61800-5-2 "Safe Torque Off (STO)"

#### MOTOR CONTROL Permanent magnet motors



The PM motor conforming to highefficiency regulations can be controlled. The PM motor promotes further energy saving and achieves earth-friendly machine control.

# Position and run!

The MX2-V1 is a drive and position controller in one, ideal for modular machines where moderate positional accuracy is required. Speed synchronisation is also possible, with no additional programming required.

#### Speed synchronisation



With no external hardware required, and via standard parameter settings, speed synchronisation can be achieved. The MX2-V1 will act as a speed follower to an external pulse generator/encoder signal up to 32 KHz.


#### **Positioning functionality**




Specially developed application functionality enables the MX2-V1 to solve simple positioning tasks without the need for an external controller. Up to 8 positions, plus home, can be selected by the user, and furthermore, the MX2-V1 can be switched between speed and position mode.

# **Program and play!**

The MX2-V1 gives you the power to create smart solutions using PLC functionality, as standard. Via an intuitive flow chart programming tool, you can create programs with up to 1000 lines of code and with 5 tasks running in parallel.

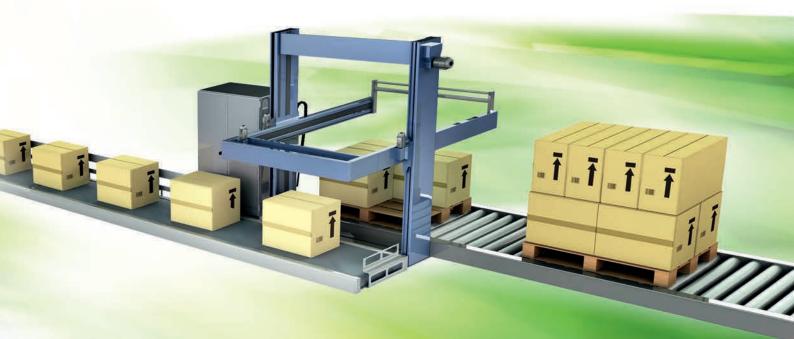

#### Free to program

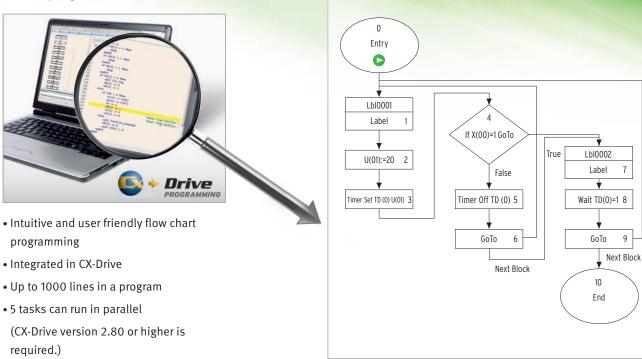

7

9

# Multi-function Compact Inverter MX2-Series V1 type

# Born to drive machines

- Positioning functionality.
- Fieldbus communications with optional unit EtherCAT, CompoNet and DeviceNet
- Drive Programming.
- Current vector Control.
- High Starting torque: 200% at 0.5 Hz.
- Safety function \* EN ISO13849-1 Cat.3 PLd
- IEC 61800-5-2 "Safe Torque Off (STO)" • Speed range up to 580 Hz.
- \* When optional DeviceNet communication unit or CompoNet communication unit is mounted onto the MX2-series V1 type, the inverter will not conform to the safety standards.



# **Performance Specifications**

#### Inverter MX2-series V1 type

3-phase 200 V Class

Function name		3-phase 200 V											
Model name	e (3G3MX	2-)	A2001-V1	A2002-V1	A2004-V1	A2007-V1	A2015-V1	A2022-V1	A2037-V1	A2055-V1	A2075-V1	A2110-V1	A2150-V1
Applicable	kW	СТ	0.1	0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15
	KVV	VT	0.2	0.4	0.75	1.1	2.2	3.0	5.5	7.5	11	15	18.5
motor capacity	НР	СТ	1/8	1/4	1/2	1	2	3	5	7 1/2	10	15	20
capacity	пР	VT	1/4	1/2	1	1 1/2	3	4	7 1/2	10	15	20	25
Rated	200 V	СТ	0.2	0.5	1.0	1.7	2.7	3.8	6.0	8.6	11.4	16.2	20.7
output	200 V	VT	0.4	0.6	1.2	2.0	3.3	4.1	6.7	10.3	13.8	19.3	23.9
capacity	240 V	СТ	0.3	0.6	1.2	2.0	3.3	4.5	7.2	10.3	13.7	19.5	24.9
[kVA]	240 V	VT	0.4	0.7	1.4	2.4	3.9	4.9	8.1	12.4	16.6	23.2	28.6
Rated input	voltage			3-phase 200 V - 15% to 240 V + 10%, 50/60 Hz ± 5%									
Rated input	current	СТ	1.0	1.6	3.3	6.0	9.0	12.7	20.5	30.8	39.6	57.1	62.6
[A] .		VT	1.2	1.9	3.9	7.2	10.8	13.9	23.0	37.0	48.0	68.0	72.0
Rated output	ut voltage	•	3-phase 200 to 240 V (The output cannot exceed the incoming voltage).										
Rated outpu	ıt	СТ	1.0	1.6	3.0	5.0	8.0	11.0	17.5	25.0	33.0	47.0	60.0
current [A]		VT	1.2	1.9	3.5	6.0	9.6	12.0	19.6	30.0	40.0	56.0	69.0
Short-time of braking toro (Discharge R connected)	que (%)		50	50	50	50	50	20	20	20	20	10	10
Braking Resistor		ative	Built-in Braking Resistor circuit (separate Discharge Resistor)										
circuit *	Min. cor resistan	nectable ce [ $\Omega$ ]	100	100	100	50	50	35	35	20	17	17	10
Weight [kg]			1.0	1.0	1.1	1.2	1.6	1.8	2.0	3.3	3.4	5.1	7.4
Dimensions (width × height) [mm]			68 ×	128		108 × 128		140 × 128	140>	× 260	180 × 296	220× 350	
Dimensions	(depth)	[mm]	10	09	122.5	145.5	17	0.5	170.5	1:	55	1	75

\* The BRD usage is 10%.

Fun	ction nai	ne	3-phase 400 V									
Model name	e (3G3M)	(2-)	A4004-V1	A4007-V1	A4015-V1	A4022-V1	A4030-V1	A4040-V1	A4055-V1	A4075-V1	A4110-V1	A4150-V1
	kW	СТ	0.4	0.75	1.5	2.2	3.0	4.0	5.5	7.5	11	15
Applicable	K V V	VT	0.75	1.5	2.2	3.0	4.0	5.5	7.5	11	15	18.5
motor capacity	НР	СТ	1/2	1	2	3	4	5	7 1/2	10	15	20
	пг	VT	1	2	3	4	5	7 1/2	10	15	20	25
Rated	380 V	СТ	1.1	2.2	3.1	3.6	4.7	6.0	9.7	11.8	15.7	20.4
output	300 V	VT	1.3	2.6	3.5	4.5	5.7	7.3	11.5	15.1	20.4	25.0
capacity	480 V	СТ	1.4	2.8	3.9	4.5	5.9	7.6	12.3	14.9	19.9	25.7
[kVA]	400 V	VT	1.7	3.4	4.4	5.7	7.3	9.2	14.5	19.1	25.7	31.5
Rated input	voltage			3-phase 380 V - 15% to 480 V + 10%, 50/60 Hz ± 5%								
Rated input	current	СТ	1.8	3.6	5.2	6.5	7.7	11.0	16.9	18.8	29.4	35.9
[A]		VT	2.1	4.3	5.9	8.1	9.4	13.3	20.0	24.0	38.0	44.0
Rated outpu	ut voltag	e	3-phase 380 to 480 V (The output cannot exceed the incoming voltage).									
Rated outpu	Jt	СТ	1.8	3.4	4.8	5.5	7.2	9.2	14.8	18.0	24.0	31.0
current [A]		VT	2.1	4.1	5.4	6.9	8.8	11.1	17.5	23.0	31.0	38.0
Short-time o braking toro (Discharge R connected)	que (%)		50	50	50	20	20	20	20	20	10	10
Braking Regenerative braking		ative	Built-in Braking Resistor circuit (separate Discharge Resistor)									
Resistor circuit *	Min. co resistar	nnectable nce [Ω]	180	180	180	100	100	100	70	70	70	35
Weight [kg]			1.5	1.6	1.8	1.9	1.9	2.1	3.5	3.5	4.7	5.2
Dimensions [mm]	(width $\times$	height)			108 × 128	1		140 × 128	140 >	< 260	180 :	× 296
Dimensions	(depth)	Dimensions (depth) [mm]			17	0.5		170.5	15	55	17	75

The BRD usage is 10%.

#### 1-phase 200 V Class

Function name			1-phase 200 V							
Model name	e (3G3MX	2-)	AB001-V1	AB002-V1	AB004-V1	AB007-V1	AB015-V1	AB022-V1		
	kW	СТ	0.1	0.2	0.4	0.75	1.5	2.2		
Applicable motor capacity	ĸvv	VT	0.2	0.4	0.55	1.1	2.2	3.0		
	НР	СТ	1/8	1/4	1/2	1	2	3		
	пг	VT	1/4	1/2	3/4	1 1/2	3	4		
Rated	200 V	СТ	0.2	0.5	1.0	1.7	2.7	3.8		
output	200 V	VT	0.4	0.6	1.2	2.0	3.3	4.1		
capacity	240 V	СТ	0.3	0.6	1.2	2.0	3.3	4.5		
[kVA]	240 V	VT	0.4	0.7	1.4	2.4	3.9	4.9		
Rated input voltage			1	1-phase 200 V - 15% to 240 V + 10%, 50/60 Hz ± 5%						
Rated input	Rated input current		1.3	3.0	6.3	11.5	16.8	22.0		
[A]		VT	2.0	3.6	7.3	13.8	20.2	24.0		
Rated output	ut voltage	•	3-phase 200 to 240 V (The output cannot exceed the incoming voltage).							
Rated outpu	ıt	СТ	1.0	1.6	3.0	5.0	8.0	11.0		
current [A]		VT	1.2	1.9	3.5	6.0	9.6	12.0		
Short-time deceleration braking torque (%) (Discharge Resistor not connected)			50	50	50	50	50	20		
Braking Resistor	Regenera braking	ative	Built-in Braking Resistor circuit (separate Discharge Resistor)					istor)		
circuit *	Min. cor resistan	nectable ce [Ω]	100	100	100	50	50	35		
Weight [kg]			1.0	1.0	1.1	1.6	1.8	1.8		
Dimensions (width × height) [mm]		68 × 128			108 × 128					
Dimensions	(depth)	[mm]	1(	)9	122.5		170.5			

\* The BRD usage is 10%.

# **Function Specifications**

Enclosure ratings *1         Open type (IP20)           Control method         Phase-to-phase sinusoidal modulation PVM           Output frequency range *2         0.10 to 40 kg (or 500 Hz in the high-frequency mode; restrictions apply)           Digital command: a0.0% of the max. frequency, Analog command: a0.2% of the max. Intequency (22±10°C)         0.10 to 40 Hz (or 500 Hz, analog setting; One-thousandth of the maximum frequency (22±10°C)           Voltage/Frequency setting resolution         Digital setting: On1 Hz, Analog setting; One-thousandth of the maximum frequency (22±10°C)           Overload current rating         Heavy iced and rating (CT) 105%80 s           Instantaneous overcurrent         200% of the value of heavy load rating (CT)           Acceleration/Beceleration/time         0.01 to 3000 s (insert/curve selection), acceleration/deceleration 2 setting available           Carrier frequency adjustment ratego         200% of the value of heavy load rating (CT) incomend, at a value set lower than that in deceleration via the STOP command, at a value set lower than that in during operation or via an oxenel input. (Level and the settable).           Protective functions         Protective functions           Protective functions         Digital Operator           Protective function input *1         7 points (Functions can be selected from among 68)           Protective functions         Digital Operator           Protective functions         Digital Operator           Protective function inp		Function name	Specifications			
Output frequency range *2         0.10 to 400 Hz (or 580 Hz in the high-frequency mode: restrictions apply)           Frequency precision *3         Digital setting: 0.01% of the max. frequency. Analog command: 40.2% of the max. frequency           Verticege/Frequency setting resolution         Digital setting: 0.01 Hz, Analog setting: One-thousandth of the maximum frequency           Verticege/Frequency characteristics         Control with speed feedback           Overload current tailing         Light load railing (CT): 150%/60 s           Instantaneous overcurrent         200% of the value of heavy load railing (CT): 150%/60 s           Acceleration/Deceleration time         0.01 to 3800 s (linear/curve selection), acceleration/deceleration 2 setting available           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque         200% of the value of heavy load rating (CT) in 50%/60 s           Starting torque values and in the indeceleration value and innesestable)         200% of the value of heavy lo	Enc	losure ratings *1	Open type (IP20)			
Frequency precision *3         Digital command: ±0.1% of the max. frequency. Analog command: ±0.2% of the max. frequency (Z5:10°C).           Frequency setting resolution         Upgital setting: 0.01 Hz, Analog setting: Doe thousandth of the maximum frequency (Vf characteristics Constant/reduced torque)           Overfaad current rating         Heavy load rating (CT): 150%60 s           Light load rating (CT): 150%60 s         Light load rating (CT): 150%60 s           Exceloration/Decoleration time         200% of the value of heavy load rating (CT)           Carrier frequency adjustment rage         210 State (with dearting)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           Starting torque         200%		Control method	Phase-to-phase sinusoidal modulation PWM			
Projectory processor 3         (25±10°C)           Projectory setting resolution 3         (25±10°C)           Valtage/Frequency characteristics         Sensitive Section 2000           Projection         200% of the value of heavy load rating (CT)           Acceleration/Deceleration time         0.01 to 3800 s (linear/curve selection), acceleration/deceleration 2 setting available           Carrier frequency adjustment range         200% of the value of heavy load rating (CT)           Starting torque         200% of the value of heavy load rating (CT)           External DC injection braking         Starts at a frequency load rating (CT) acceleration via the STOP command, at a value set lower than that during operation, or via an external input. (Levon ad time sentable).           Protective functions         Starts at a frequency load rating during signal (CP) are communication (Modbus-RTU)           Relay output 5         Digital Operator           External DC injection braking         Digital Operator           External DC injection protein ad gital input signal (S-wire input supported), Modbus communication (Modbus-RTU)           Relay output 4         Digital Operator		Output frequency range *2	0.10 to 400 Hz (or 580 Hz in the high-frequency mode; restrictions apply)			
Voltage/Frequency characteristics         Virt characteristics		Frequency precision *3	Digital command: ±0.01% of the max. frequency, Analog command: ±0.2% of the max. frequency (25±10°C)			
Voltager Pequency Status         Sensoriess vector control. V/r control with speed feedback           Voltager Pequency         Sensoriess vector control. V/r control with speed feedback           Vector         Control current rating         Heavy load rating (CT): 120%/60 s           Acceleration/Deceleration time         O.01 to 3600 s (linear/curve selection), acceleration/deceleration 2 setting available           Carrier frequency adjustment range         Io 15 kHz (with derating)           Starting torque         Santing torque           External DC injection braking         Start is a frequency lower than that in deceleration via the STOP command, at a value set lower than that during operation, or via an external input. (Level and time settable).           Provency settings         Epidemovia at a frequency operation or via an external input. (Level and time settable).           RUNSTOP command         Digital Operator current or ground fault overcurrent overcurent digital input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Wulti-function input *4         7 points (Functions can be selected from among 68)           Analog input *5         2 points (P1 terminal: 32 kHz max, 5 to 24 VDC)           Pulse input         1 point (RP1 terminal: 24 kHz max, 0 to 10 V) (Frequency, current selectable)           Pulse uput *4         1 point (RP1 terminal: 32 kHz max, 0 to 10 V)           Relay output *4         1 point (RP1 terminal: 32 kHz max, 0 to 10 V)           Rela		Frequency setting resolution	Digital setting: 0.01 Hz, Analog setting: One-thousandth of the maximum frequency			
Instantaneous overcurrent protection         200% of the value of heavy load rating (CT)           Acceleration/Deceleration time         0.01 to 3600 s ((inear/curve selection), acceleration/deceleration 2 setting available           Carrier frequency adjustment range         2 to 15 kHz (with derating)           Starting torque         200% of 1k (ensorfies vector control)           External DC injection braking         Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that that during operation, or via an external input. (Level and time settable).           Vector:rent, overvoltage, undervoltage, electronic thermal, temperature error, ground fault overcur- nal trip, memory error, CPU error, USP error, communication emprantus energiency cutoff, etc.           Vector:rent analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Multi-function input *4         7 points (Functions can be selected from among 68)           Analog input *5         2 points (Voltage FV terminal: 10 bits/0 to 10 V) Current FI terminal: 10 bits/4 to 20 mA)           Value input         1 point (RP terminal: 32 kHz max, 5 to 24 VDC)           Multi-function output *4         1 point (RP terminal: 32 kHz max, 0 to 10 V) (Frequency, current selectable)           Pulse input         1 point (MP terminal: 32 kHz max, 0 to 10 V)           Relay output *4         1 point (MP terminal: 32 kHz max, 0 to 10 V)           Relay output (Frequency emonion)         1 point (MP terminal: 32 kHz max, 0 to 10	-	Voltage/Frequency characteristics				
Instantaneous overcurrent protection         200% of the value of heavy load rating (CT)           Acceleration/Deceleration time         0.01 to 3600 s ((inear/curve selection), acceleration/deceleration 2 setting available           Carrier frequency adjustment range         2 to 15 kHz (with derating)           Starting torque         200% of 1k (ensorfies vector control)           External DC injection braking         Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that that during operation, or via an external input. (Level and time settable).           Vector:rent, overvoltage, undervoltage, electronic thermal, temperature error, ground fault overcur- nal trip, memory error, CPU error, USP error, communication emprantus energiency cutoff, etc.           Vector:rent analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Multi-function input *4         7 points (Functions can be selected from among 68)           Analog input *5         2 points (Voltage FV terminal: 10 bits/0 to 10 V) Current FI terminal: 10 bits/4 to 20 mA)           Value input         1 point (RP terminal: 32 kHz max, 5 to 24 VDC)           Multi-function output *4         1 point (RP terminal: 32 kHz max, 0 to 10 V) (Frequency, current selectable)           Pulse input         1 point (MP terminal: 32 kHz max, 0 to 10 V)           Relay output *4         1 point (MP terminal: 32 kHz max, 0 to 10 V)           Relay output (Frequency emonion)         1 point (MP terminal: 32 kHz max, 0 to 10	ontro	Overload current rating				
Carrier frequency adjustment range         2 to 15 kHz (with derating)           Starting torque         200%/0.5 Hz (sensorfess vector control)           External DC injection braking         Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that during operation, or via an external input. (Level and time settable).           Protective functions         Overcurrent, orevoltage, underrolitage, electronic thermal, temperature error, ground fault overcurent or eventolage, underrolitage meteronic thermal, temperature error, ground fault overcurent or eventolage, underrolitage meteronic thermal, temperature error, ground fault overcurent overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent, overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent, overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent, overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent, overonlage, underrolitage meteronic thermal, temperature error, ground fault overcurent, overonlage, underrolitage enderrolitage enderrolite	0		200% of the value of heavy load rating (CT)			
Starting torque         200%/0.5 Hz (sensorless vector control)           External DC injection braking         Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that during operation, or via an external injunt. (Level and time settable).           Protective functions         Covercurrent, overvoltage, undervoltage, electronic thermal, timeoring overoltage, external info, memory error, CPU error, USP error, communication error, overvoltage suppression during deceleration, protection upon momentary power outage, emergency cutoff, etc.           Protective functions         Digital Operator External analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           RUN/STOP command         Digital Operator External digital input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Pulse input         1 points (FINCtions can be selected from among 68)           Analog input *5         2 points (Voltage FV terminal: 10 bits/0 to 10 V, Current FI terminal: 10 bits/4 to 20 mA)           Pulse input         1 point (RPT contact (MC, MA, MB), Functions can be selected from among 47)           1 point (APT contact (MC, MA, MB), Functions can be selected from among 47)           1 point (MPT contact (MC, MA, MB), Functions can be selected from among 47)           1 point (MP terminal: 32 kHz max., 5 to 24 VDC)           Relay output *4         1 point (MP terminal: 32 kHz max., 5 to 24 VDC)           Relay output *5         2 points (Voltage 10 bits/0 to 10 V) (Frequency, current selectable)		Acceleration/Deceleration time	0.01 to 3600 s (linear/curve selection), acceleration/deceleration 2 setting available			
External DC injection braking         Starts at a frequency lower than that in deceleration via the STOP command, at a value set lower than that during operation, or via an external input. (Level and time settable).           Protective functions         Starts at a frequency lower than that undervoltage, electronic thermal, temperature error, ground fault overcurrent at power-on status, rush current prevention circuit, overvoltage indervoltage, electronic thermal, temperature error, ground fault overcurrent at power-on status, rush current prevention circuit, overvoltage indervoltage, electronic thermal, temperature error, ground fault overcurrent at power-on status, rush current prevention circuit, overvoltage indervoltage, electronic thermal, temperature error, ground fault overcurrent at power-on status, rush current prevention circuit, overvoltage, uprevalues, external input. USP error, communication error, overvoltage, supportsond upon momentary power outage, emergency cutoff, etc.           Protective functions         Digital Operator External analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Multi-function input *4         7 points (Functions can be selected from among 68)           Analog output *5         2 points (P1 emrinal: 20 kHz max, 5 to 24 VDC)           Multi-function output *4         1 point (RP terminal: 20 kHz max, 5 to 24 VDC)           Pulse upput         1 point (PD Toronat (MC, MA, MB). Functions can be selected from among 47)           Relay output *6         1 point (MP terminal: 32 kHz max, 0 to 10 V) (Frequency, current selectable)           Pulse output         1 point (MP terminal: 32 kHz max, 0 to 10 V)		Carrier frequency adjustment range	2 to 15 kHz (with derating)			
Reternal DC Injection Draking         than that during operation, or via an external input. (Level and time settable).           Protective functions         Overcourrent, overoltage, undervoltage, electronic thermal, temperature error, ground fault overcourrent and previotion dirouit, overload limit, incoming overoltage, external and previoted, undervoltage, energency conting, external and previotage, energency conting, etc.           Protection Protection Upon momentary power outage, emergency outage, external and previotage input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           RUNSTOP command         Digital Operator External analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Nulti-function input *4         7 points (Functions can be selected from among 68) Analog input *5         2 points (Put meminal: 30 bits/0 to 10 V. Current FI terminal: 10 bits/4 to 20 mA)           Pulse input         1 point (PP terminal: 30 bits/0 to 10 V). Current FI terminal: 10 bits/4 to 20 mA)           Pulse output *4         1 point (SPDT contact (MC, MA, MB), Functions can be selected from among 47)           Relay output *4         1 point (MP terminal: 32 kHz max., 0 to 10 V)           Resetz         R.445 connector (for Digital Operator)           Resetz         Control circuit terminal block, Modbus communication (Modbus-RTU)           USB         USB1.1, mini-B connector           Rusternal and the momentary power outpace and the setterable)		Starting torque	200%/0.5 Hz (sensorless vector control)			
rent at power-on status, rush current prevention circuit, overload limit, incoming overvoltage, exter- nal trip, memory error, CPU error, LSP error, communication error, overvoltage suppression during deceleration, protection upon momentary power outage, emergency cutoff, etc.           Frequency settings         Digital Operator External digital input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           Wulti-function input *4         7 points (Functions can be selected from among 68)           Analog input *5         2 points (Voltage FV terminal: 10 bits/0 to 10 V, Current FI terminal: 10 bits/4 to 20 mA)           Pulse input         1 point (RP terminal: 22 kHz max., 50 24 VDC)           Wulti-function output *4         2 points (FUnctions can be selected from among 47)           Relay output *1         1 point (RP terminal: 22 kHz max., 50 24 VDC)           Relay output (Frequency monitor)         1 point (RP terminal: 32 kHz max., 0 to 10 V) (Frequency, current selectable)           Pulse output         1 point (MP terminal: 32 kHz max., 0 to 10 V)         Relay cutput (Frequency function, V/r characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, logging operation, carrier frequency duitternet, for daracteristics, level adjustment, logging operation, carrier frequency duitternet, PID control, frequency jump, analog guin/bias adjus/US function, notrol spee acceleration, eleventarier function, tercus           Muter         4 Adv R function, V/r characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustiment, logging operation, carrier frequency duitternet, PID con		External DC injection braking				
Frequency settings         External analog input signal: 0 to 10 VDC/4 to 20 mA, Modbus communication (Modbus-RTU)           RUN/STOP command         Digital Operator External digital input signal (3-wire input supported), Modbus communication (Modbus-RTU)           Multi-function input *4         7 points (Functions can be selected from among 68)           Analog input *5         2 points (Voltage FV terminal: 10 bits/0 to 10 V, Current FI terminal: 10 bits/4 to 20 mA)           Pulse input         1 point (RP terminal: 32 kHz max., 5 to 24 VDC)           Multi-function output *4         2 points (P1 and P2, Functions can be selected from among 47)           Relay output *4         1 point (RP terminal: 32 kHz max., 5 to 24 VDC)           Pulse output *4         1 point (P1 contact (MC, MA, MB), Functions can be selected from among 47)           Relay output *4         1 point (MP terminal: 32 kHz max., 0 to 10 V) (Frequency, current selectable)           Pulse output         1 point (MP terminal: 32 kHz max., 0 to 10 V)           Res422         RJ45 connector (for Digital Operator)           Rs-445         Control circuit terminal block, Modbus communication (Modbus-RTU)           USB         USB11, mini-B connector           AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, poging operation, carrier frequency adjustment, PID control, frequency jump, analog gair/bias adjustment, poging operation, carrier frequency adjustment, PID control, frequency conversion display, USP function	Pro	tective functions	rent at power-on status, rush current prevention circuit, overload limit, incoming overvoltage, exter- nal trip, memory error, CPU error, USP error, communication error, overvoltage suppression during			
Pulse input       1 point (Votage) ** Control (Cotage) ** Control **, Cottor **,	le	Frequency settings				
Pulse input       1 point (Votage) ** Control (Cotage) ** Control **, Cottor **,	signa	RUN/STOP command				
Pulse input       1 point (Votage) ** Control (Cotage) ** Control **, Cottor **,	put	Multi-function input *4	7 points (Functions can be selected from among 68)			
Multi-function output *4         2 points (P1 and P2, Functions can be selected from among 47)           Relay output *4         1 point (SPDT contact (MC, MA, MB), Functions can be selected from among 47)           Analog output (Frequency monitor)         1 point (AM terminal: Voltage 10 bits/0 to 10 V) (Frequency, current selectable)           Pulse output         1 point (MP terminal: 32 kHz max., 0 to 10 V)           RS-422         RJ45 connector (for Digital Operator)           Ks-485         Control circuit terminal block, Modbus communication (Modbus-RTU)           USB         USB1.1, mini-B connector           AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, shape acceleration/deceleration, electronic thermal characteristics, level adjustment, roque boost function, fault monitor, soft lock function, requency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.           Ambient operating temperature *7         -10 to 50°C (However, derating is required).           Vibration resistance         5.9 m/s <sup>2</sup> (0.6G), 10 to 55 Hz           Application environment         At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)           BiterCAT Communication Unit         3G3AX-MX2-CCT-E	느	Analog input *5	2 points (Voltage FV terminal: 10 bits/0 to 10 V, Current FI terminal: 10 bits/4 to 20 mA)			
Relay output *4         1 point (SPDT contact (MC, MA, MB), Functions can be selected from among 47)           Analog output (Frequency monitor)         1 point (AM terminal: Voltage 10 bits/0 to 10 V) (Frequency, current selectable)           Pulse output         1 point (AM terminal: 32 kHz max., 0 to 10 V)           RS-422         RJ45 connector (for Digital Operator)           RS-485         Control circuit terminal block, Modbus communication (Modbus-RTU)           USB         USB1.1, mini-B connector           AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, S shape acceleration/deceleration, electronic thermal characteristics, level adjustment, shape acceleration/deceleration, featurental characteristics, level adjustment, restart function, notor 2 control function, frequency jump, analog ustrement, restart function, motor 2 control function, furguency jump, analog ustrement, restart function, motor 2 control function, furguency jump, analog ustrement, restart function, motor 2 control function, furguency jump, analog ustrement, restart function, motor 2 control function, furguency jump, analog ustrement, restart function, motor 2 control function, furguency jump, analog ustrement, restart function, motor 2 control function, full monitor, soft lock function, frequency jump, analog ustrement of shape acceleration/deceleration, fault monitor, soft lock function, frequency jump, analog ustrement proversion display, USP function, motor 2 control function, full monitor, soft lock function, frequency jump, analog ustrement the storage temperature *7           Ambient operating temperature *7         -10 to 50°C (However, derating is required).		Pulse input	1 point (RP terminal: 32 kHz max., 5 to 24 VDC)			
Puise output       Tpoint (wiP terminal: 32 KH2 max, 0 to 10 V)         RS-422       RJ45 connector (for Digital Operator)         RS-485       Control circuit terminal block, Modbus communication (Modbus-RTU)         USB       USB1.1, mini-B connector         AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mabient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	a	Multi-function output *4	2 points (P1 and P2, Functions can be selected from among 47)			
Puise output       Tpoint (wiP terminal: 32 KH2 max, 0 to 10 V)         RS-422       RJ45 connector (for Digital Operator)         RS-485       Control circuit terminal block, Modbus communication (Modbus-RTU)         USB       USB1.1, mini-B connector         AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mabient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	sign	Relay output *4	1 point (SPDT contact (MC, MA, MB), Functions can be selected from among 47)			
Puise output       Tpoint (wiP terminal: 32 KH2 max, 0 to 10 V)         RS-422       RJ45 connector (for Digital Operator)         RS-485       Control circuit terminal block, Modbus communication (Modbus-RTU)         USB       USB1.1, mini-B connector         AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mabient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	utput s		1 point (AM terminal: Voltage 10 bits/0 to 10 V) (Frequency, current selectable)			
Other functions       AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog adjustment, restart function, torque boost function, electronic thermal characteristics, level adjustment, restart function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mbient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	0	Pulse output	1 point (MP terminal: 32 kHz max., 0 to 10 V)			
Other functions       AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog adjustment, restart function, torque boost function, electronic thermal characteristics, level adjustment, restart function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mbient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	ations	RS-422	RJ45 connector (for Digital Operator)			
Other functions       AVR function, V/f characteristics switching, upper/lower limit, 16-step speeds, starting frequency adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog adjustment, restart function, torque boost function, electronic thermal characteristics, level adjustment, restart function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Mbient operating temperature *7       -10 to 50°C (However, derating is required).         Ambient operating humidity       20% to 90% RH (with no condensation)         Vibration resistance       5.9 m/s² (0.6G), 10 to 55 Hz         Application environment       At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)         EtherCAT Communication Unit       3G3AX-MX2-ECT         CompoNet Communication Unit       3G3AX-MX2-CRT-E	munica	RS-485	Control circuit terminal block, Modbus communication (Modbus-RTU)			
other functions       adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration/deceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Image: start start start start start start start function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function, etc.         Image: start star		USB	USB1.1, mini-B connector			
EtherCAT Communication Unit         3G3AX-MX2-ECT           CompoNet Communication Unit         3G3AX-MX2-CRT-E	Oth	er functions	adjustment, jogging operation, carrier frequency adjustment, PID control, frequency jump, analog gain/bias adjustment, S shape acceleration/deceleration, electronic thermal characteristics, level adjustment, restart function, torque boost function, fault monitor, soft lock function, frequency conversion display, USP function, motor 2 control function, UP/DWN, overcurrent control function,			
EtherCAT Communication Unit         3G3AX-MX2-ECT           CompoNet Communication Unit         3G3AX-MX2-CRT-E	nent	Ambient operating temperature *7	-10 to 50°C (However, derating is required).			
EtherCAT Communication Unit         3G3AX-MX2-ECT           CompoNet Communication Unit         3G3AX-MX2-CRT-E	vironr	•				
EtherCAT Communication Unit         3G3AX-MX2-ECT           CompoNet Communication Unit         3G3AX-MX2-CRT-E	ng en					
EtherCAT Communication Unit         3G3AX-MX2-ECT           CompoNet Communication Unit         3G3AX-MX2-CRT-E	berati					
CompoNet Communication Unit 3G3AX-MX2-CRT-E	ő	••				
CompoNet Communication Unit 3G3AX-MX2-CRT-E DeviceNet Communication Unit 3G3AX-MX2-DRT-E	su					
O DeviceNet Communication Unit 3G3AX-MX2-DRT-E	ptio	CompoNet Communication Unit	3G3AX-MX2-CRT-E			
	0	DeviceNet Communication Unit	3G3AX-MX2-DRT-E			

Function name			Specifications
Other option			DC reactor, AC reactor, radio noise filter, input noise filter, output noise filter, regenerative braking unit, Braking Resistor, etc.
standard	EU Directives	Machinery	EN ISO 13849-1: 2008 Pld EN 61800-5-2 EN 60204-1
	and UK legislation	EMC	EN 61800-3: 2004
International		Low-voltage	EN 61800-5-1: 2007
Inte	UL/cUL		UL508C

\*1 Protection method complies with JEM 1030.

\*2 To operate the motor at over 50/60 Hz, contact the motor manufacturer to find out the maximum allowable speed of revolution.

\*3

For the stable control of the motor, the output frequency may exceed the maximum frequency set in A004 (A204) by 2 Hz max. In the VT (light load) mode and the PM motor mode, the available functions are limited compared with the CV (heavy load) mode. For some \*4 parameters, the default data and setting range also differ.

\*5 By default, the maximum frequency is adjusted to 9.8 V for a voltage input of 0 to 10 VDC and to 19.8 mA for a current input of 4 to 20 mA, respectively. If necessary, adjust the default parameter settings.

The analog voltage and current values for the multi-function monitor output terminals show values that can only be used as a guide for analog meter connection. The maximum output value may differ from 10 V or 20 mA due to the variability of the analog output circuit. If necessary, \*6 adjust the default parameter settings.


Derating of the rated output current of the inverter may be required depending on the heavy/light load mode selection, operating ambient temperature, side-by-side installation, and carrier frequency setting. Use the inverter in an appropriate environment according to USER'S \*7 MANUAL (Cat.No.1585).

Note: 1. The applicable motor is a 3-phase standard motor. For using any other type, be sure that the rated current does not exceed that of the Inverter. Output voltage decreases according to the level of the power supply voltage.

The braking torque at the time of capacitor feedback is an average deceleration torque at the shortest deceleration (when it stops from 3. 50 Hz). It is not a continuous regeneration torque. Also, the average deceleration torque varies depending on the motor loss. The value is reduced in operation over 50 Hz.

### **Components and Functions**


#### Inverter MX2-series V1 type

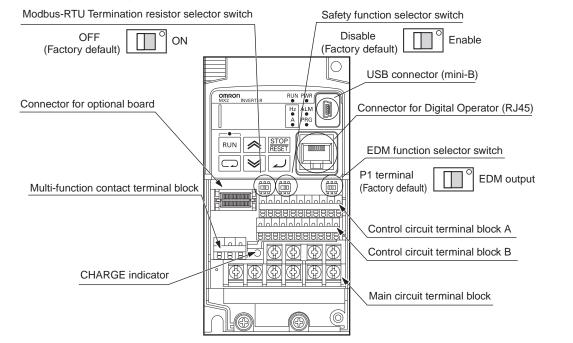

Name	Function
Modbus-RTU Termination resistor selector switch	Use this Terminal Resistor selector switch for RS-485 terminals on the control circuit terminal block. When this switch is turned ON, the internal 200 $\Omega$ Resistor is connected.
Safety function selector switch	Turn this switch ON when using the safety function. Turn OFF the power before turning this switch ON/OFF. For details, refer to USER'S MANUAL (Cat.No.I585).
EDM function selector switch	Turn this switch ON when using the EDM output of the safety function. Turn OFF the power before turning this switch ON/ OFF.For details, refer to USER'S MANUAL (Cat.No.I585).
USB connector	Use this mini-B USB connector to connect a PC. Even when the Inverter is being operated by a PC, etc., via USB connection, it can still be operated using the Digital Operator.
Connector for Digital Operator	Use this connector to connect the Digital Operator.
Connector for optional board	Use this connector to mount the optional board. (Communications Units and other options can be connected.)
Control circuit terminal blocks A and B	These terminal blocks are used to connect various digital/analog input and output signals for inverter control, etc.
Multi-function contact terminal block	Use this SPDT contact terminal block for relay outputs.
Main circuit terminal block	Use this terminal block to connect an output to the motor and Braking Resistor, etc. Also, use this terminal block to connect the inverter to the main power supply.
CHARGE indicator (Charge indicator LED)	This LED indicator is lit if the DC voltage of the main circuit (between terminals P/+2 and N/-) remains approx. 45 V or above after the power has been cut off. Before wiring, etc. confirm that the Charge LED indicator is turned OFF.


Note: This illustration shows the terminal block with the front cover removed.


# **Connection Diagram**

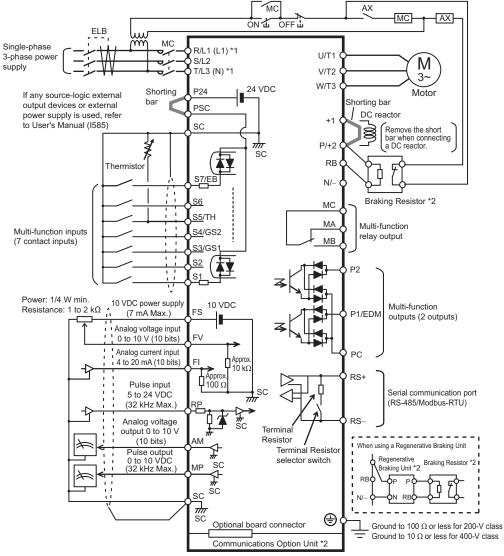

# Dimensions









Power supply	Model	W [mm]	H [mm]	D [mm]	D1 [mm]
1-phase 200 V	3G3MX2-AB001-V1 3G3MX2-AB002-V1			109	13.5
	3G3MX2-AB004-V1			122.5	27
3-phase	3G3MX2-A2001-V1 3G3MX2-A2002-V1	68	128	109	13.5
200 V	3G3MX2-A2004-V1			122.5	27
	3G3MX2-A2007-V1			145.5	50

(Unit: mm)

### Multi-function Compact Inverter MX2-Series V1 type

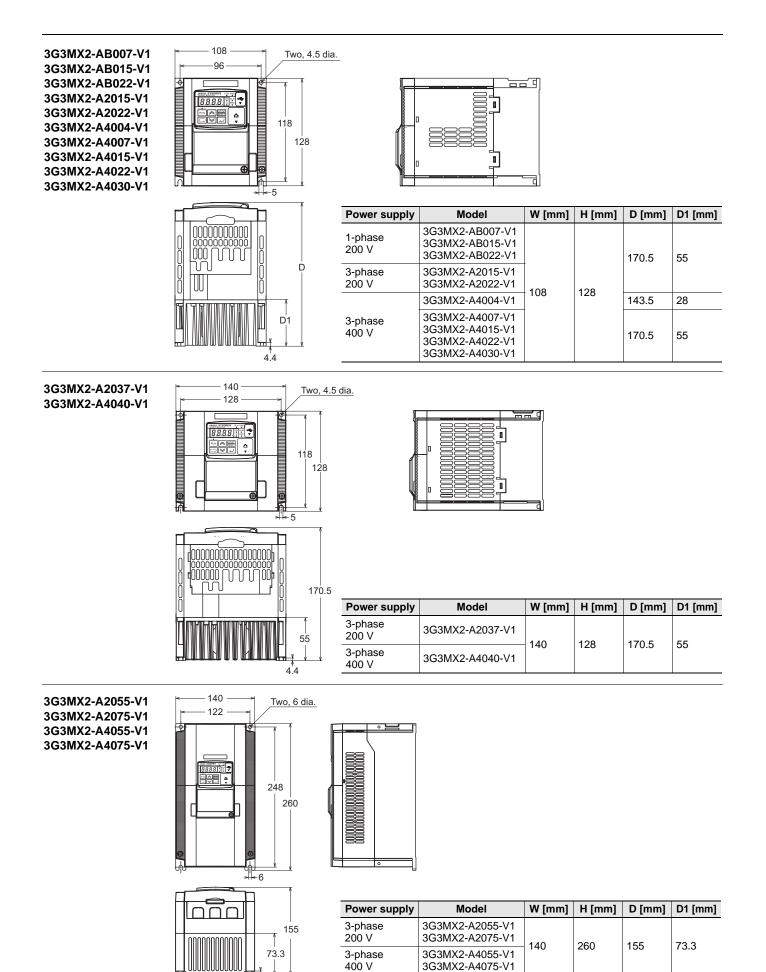

6

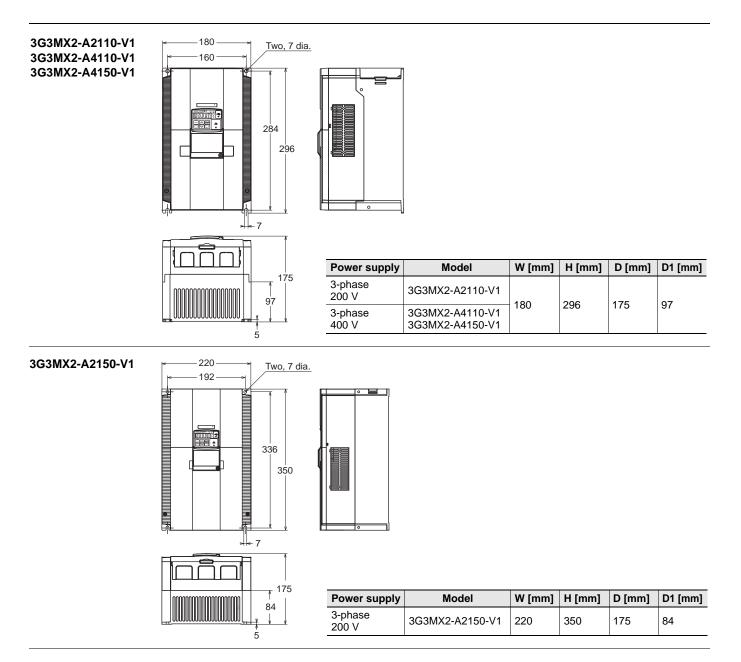

# **Communication Unit**

### MX2-Series EtherCAT Communication Unit 3G3AX-MX2-ECT

This is the communication unit to connect the Multi-function Compact Inverter MX2 to EtherCAT network. This communication unit passed the conformance test of EtherCAT.

#### **Common Specifications**

	Item	Specifications		
Power supply		Supplied from the inverter		
Protective structure		Open type (IP20)		
Ambient operating temperature		-10 to +50°C		
Ambient storage temperature		-20 to +65°C		
Ambient operating humidity		20% to 90% RH (with no condensation)		
Vibration resistance		5.9 m/s <sup>2</sup> (0.6 G), 10 to 55 Hz		
Application envir	onment	At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)		
Weight		100 g max.		
	UL/cUL	UL508C		
International standard	EU Directives and UK legislation	EMC :EN61800-3: 2004 Low Voltage :EN61800-5-1: 2003		

ltem	Specifications
Communications standard	IEC 61158 Type12, IEC 61800-7 CiA 402 drive profile
Physical layer	100BASE-TX (IEEE802.3)
Connector	RJ45 × 2 (shielded type) ECAT IN : EtherCAT input ECAT OUT : EtherCAT output
Communications media	Category 5 or higher (cable with double, aluminum tape and braided shielding) is recommended.
Communications distance	Distance between nodes: 100 m max.
Process data	Fixed PDO mapping PDO mapping
Mailbox (CoE)	Emergency messages, SDO, SDO responses, and information
Distributed clock	FreeRun mode (asynchronous)
LED display	L/A IN (Link/Activity IN) $\times$ 1 L/A OUT (Link/Activity OUT) $\times$ 1 RUN $\times$ 1 ERR $\times$ 1
CiA402 drive profile	Velocity mode

#### **EtherCAT Communications Specifications**

#### **EtherCAT Communication Unit Version Information**

As a Sysmac Device, the MX2-series Multi-function Compact Inverter is designed to provide optimal functionality and enhanced operability when used in conjunction with a Machine Automation Control such as NJ/NX series and the automation software Sysmac Studio.

#### **Unit Versions**


Unit	Model	Unit version			
onn	Woder	Ver.1.0	Ver1.1		
EtherCAT Communication Unit for MX2-Series	3G3AX-MX2-ECT	Supported	Supported		
Compatible Sysmac Studio version (To connect the N	J Controller)	Version1.05 or higher*	Version1.05 or higher		
Compatible Sysmac Studio version (To connect the N	X Controller)	Version1.13 or higher*	Version1.13 or higher		

\* The function that was enhanced by the upgrade for Unit version 1.1 can not be used. For detail, refer to "Function Support by Unit Version".

#### **Function Support by Unit Version**

Unit		Unit version 1.1	
Model Unit versio	Unit version 1.0		
Item	1		
Store-function of back-up number of parameters	Not supported	Supported	
Initializing function as parameters.	Not supported	Supported	

#### **Dimensions (Unit: mm)**

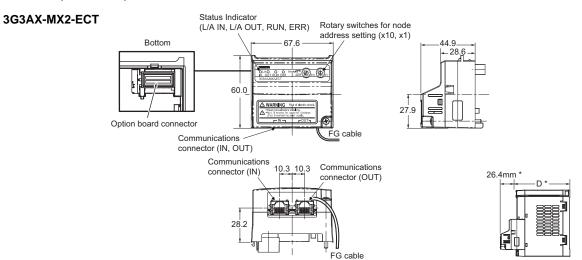

\*After the EtherCAT Communication Unit is installed, dimension D of the inverter increases by 26.4 mm.

(Dimension D of the inverter varies depending on the capacity. Refer to the MX2-series V1 type USER'S MANUAL (Cat.No.I585))

#### MX2-Series CompoNet Communication Unit 3G3AX-MX2-CRT-E

This is the communication unit to connect the Multi-function Compact Inverter MX2 to CompoNet network.


#### **Common Specification**

Item		Specification				
Power supply		Supplied from the inverter				
Protective structure		IP20				
Ambient operating temper	ature	– 10 to 50 °C				
Ambient storage temperat	ture	– 20 to 65 °C				
Ambient operating humidity		20 to 90%RH (with no condensation)				
Vibration resistance		5.9m/s <sup>2</sup> (0.6G), 10 to 55Hz				
Application environment		At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)				
Insulation resistance		500VAC (between isolated circuits)				
Weight		Approx. 170g				
	UL/cUL	UL508				
International standard	EU Directives	EN61800-3: 2004 (2004/108/EC) Second environment, Category C3				
	and UK legislation	EN61800-5-1: 2007 (2006/95/EC) SELV				

#### **CompoNet Communications Specifications**

Item	Specification
Slave type	Word Slave Unit (Mixed)
Certification	CompoNet Conformance Tested
CompoNet Profile	AC Drive (0x02)
Node Address	0 to 63, set with inverter parameter P190 or the rotary switches.
Communication power supply	- (External power not required)
Baud rates supported	4 Mbps, 3 Mbps, 1.5 Mbps, 93.75 kbps. Automatically detecting baud rate of Master Unit
Default Connection path	Supported, set with inverter parameter P046
Supported Assemblies	Basic Remote IO (Output assembly 20, Input assembly 70) Extended Speed IO (21, 71) Extended Speed and Torque Control (123, 173) Special IO (100, 150) Extended Control IO (101, 151) Extended Control IO and Multi function IO monitor (101, 153) Flexible Format (139, 159) Extended Speed and Acceleration Control (110, 111)
EDS file	Depending on the MX2 inverter model

#### **Dimensions (Unit: mm)**

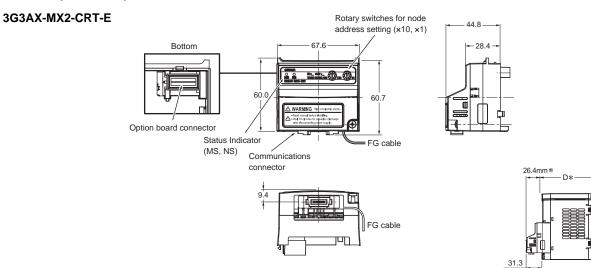

\* After the CompoNet Communication Unit is installed, dimension D of the inverter increases by 26.4 mm. (Dimension D of the inverter varies depending on the capacity. Refer to the MX2-series V1 type USER'S MANUAL (Cat.No.I585))

#### MX2-Series DeviceNet Communication Unit 3G3AX-MX2-DRT-E

This is the communication unit to connect the Multi-function Compact Inverter MX2 to DeviceNet network.

#### **Common Specification**


ltem		Specification					
Power supply		Supplied from the inverter					
Protective structure		IP20					
Ambient operating tempe	rature	– 10 to 50 °C					
Ambient storage tempera	ture	– 20 to 65 °C					
Ambient operating humidity		20 to 90%RH (with no condensation)					
Vibration resistance		5.9m/s <sup>2</sup> (0.6G), 10 to 55Hz					
Application environment		At a maximum altitude of 1,000 m; indoors (without corrosive gases or dust)					
Insulation resistance		500VAC (between isolated circuits)					
Weight		Approx. 170g					
	UL/cUL	UL508					
International standard	EU Directives	EN61800-3: 2004 (2004/108/EC) Second environment, Category C3					
	and UK legislation	EN61800-5-1: 2007 (2006/95/EC) SELV					

#### **DeviceNet Communications Specifications**

Item	Specification
Certification	DeviceNet Conformance Tested
DeviceNet Profile	AC Drive (0x02)
Supported connections	Remote I/O: Master-Slave connection Poll Bit-Strobe COS Cyclic Explicit Messages Conform to DeviceNet specifications
Communication power supply	11 to 25VDC (MAX 50 mA, type 20 mA)
Unit device address range	MAC ID 0 to 63, set with inverter parameter P192
Baud rates supported	125, 250, or 500kbps. Automatically detects baud rate of Master Unit.
Default Connection path	Supported, set with inverter parameter P046
Supported Assemblies	Basic Remote IO (Output assembly 20, Input assembly 70) Extended Speed IO (21, 71) Extended Speed and Torque Control (123, 173) Special IO (100, 150) Extended Control IO (101, 151) Extended Control IO and Multi function IO monitor (101, 153) Flexible Format (139, 159) Extended Speed and Acceleration Control (110, 111) In case the DeviceNet master is configured using user allocation, only the input / output pairs can be configured.
EDS file	Depending on the MX2 Inverter model

#### **Dimensions (Unit: mm)**

#### 3G3AX-MX2-DRT-E

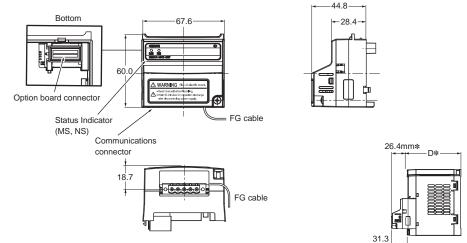


\* After the DeviceNet Communication Unit is installed, dimension D of the inverter increases by 26.4 mm. (Dimension D of the inverter varies depending on the capacity. Refer to the MX2-series V1 type USER'S MANUAL (Cat.No.I585))

# Options

#### **Regenerative Braking Unit** 3G3AX-RBU

Used with a Braking Resistor when the deceleration time of the motor is needed to be reduced in the MX2.



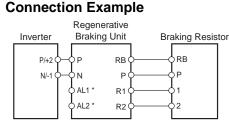

The alarm output terminals for the Regenerative Braking Unit. Provide a circuit to turn off the primary power

supply for the Inverter when the temperature relay of the built-in resistor or optional Braking Resistor is activated.

#### **Specifications** Built-in Resistance Type (3G3AX-RBU21/-RBU22/-RBU41)


	Class	3-phase	200-V class	3-phase 400-V class		
N	lodel name (3G3AX-)	RBU21	RBU22	RBU41*1		
Connection res	sistance	17 Ω min.	17 Ω min.	34 Ω min.		
Operating volta ON/OFF	age	ON : 362.5 ± 5 V OFF: 355 ± 5 V (-5% or -10% setting available)	ON : 725 ± 5 V OFF: 710 ± 5 V (-5% or -10% setting available)			
Operation indic	cation	LED ON (Lit)		· ·		
Parallel interlo	cking operation function*2	5 units max.				
	Internal resistance	120 W, 180 W	120 W, 20 W	120 W, 180 W × 2 in series		
	Allowable consecutive ON time	10 s max.	0.5 s max.	10 s max.		
Built-in resistor	Allowable operation cycle	Cycle 1/10 (ON for 10 s, OFF for 90 s)	Cycle 1/80 (ON for 0.5 s, OFF for 40 s)	Cycle 1/10 (ON for 10 s, OFF for 90 s)		
	Power consumption	Instantaneous 0.73 kW Short-time rating 120 W	Instantaneous 6.6 kW Short-time rating 120 W	Instantaneous 1.46 kW Short-time rating 240 W		
Protective function	Built-in resistor overheat protection	Cooling fin temperatureRelay of Recovers at approximately 170°C Built-in temperature fuse (recov Rating of contact250 V AC 2000 12 V DC 500mA (R load) 42 V DC 200mA (R load) • Minimum load1mA (R load)	ery impossible)*3	igher.		
	Ambient temperature	-10 to 50°C				
	Ambient storage temperature	-20 to 65°C				
Operating environment	Ambient operating humidity	20% to 90% (with no condensation	on)			
cittinent	Vibration	5.9 m/s <sup>2</sup> (0.6G) 10 to 55 Hz				
	Location	At a maximum altitude of 1,000 n	(without corrosive gases or dust)			
Paint color		Munselle 5Y7/1 (cooling fan: alur	ninum ground color)			

To use the braking resistor (Model: 3G3AX-RAB/RBB/RBC) for the 400-V class regenerative braking unit, be sure to remove the built-in resistor and connect two resistors of the same model in series. Using a 400-V class regenerative braking unit with only a single braking resistor connected may cause damage to the braking \*1 resistor.

Use DIP switches to set the number of connected units. The built-in resistor has a thermal fuse. If the alarm terminals are not connected, the fuse may blow out in order to prevent the resistor from burning due to overheating. If the fuse blows out, the built-in resistor must be replaced. \*2 \*3

#### **Dimensions (Unit: mm)**


#### 3G3AX-RBU21/-RBU22/-RBU41

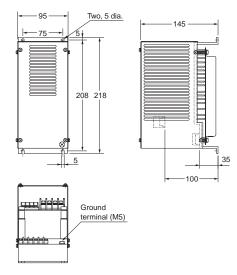


# Multi-function Compact Inverter MX2-Series V1 type


### Braking Resistor 3G3AX-RBA/-RBB/-RBC

Consumes the regenerative motor energy with a resistor to reduce deceleration time.





#### **Connection Example**



The alarm output terminals for the Braking Resistor. Provide a circuit to turn off the primary power supply for the Inverter when the temperature relay of the Braking Resistor is activated.


#### Specifications

	Model	(3		ict type BA	□)	Standard type (3G3AX-RBB				Medium capacity type (3G3AX-RBC		
		1201	1202	1203	1204	2001	2002	3001	4001	4001	6001	12001
Desistance	Capacity		120	) W		200	W	300 W	400 W	400 W	600 W	1200 W
Resistance	Resistance (W)	180	100	50	35	180	180 100		35	50	35	17
Allowable braking	ngfrequency (%)	5	2.5	1.5	1.0	10	7.5	7.5	7.5		10	
Allowable contin	nuousbraking time (s)	20	12	5	3		30		20		10	
Weight (kg)			0.	27		0.	97	1.68	2.85	2.5	3.6	6.5
Fault detection f	unction	Minimur Normall	n current y ON (NO	: 5 mA, C contact	)	240 V AC		ĸ.)		Built-in temperature relay, Normally ON (NC contact) Contact capacity:240 V AC 3 A (R load), 0.2 A (L load), 36 V DC 2 A (R load)		
	Ambient operating temperature	-10 to 5	D°C									
	Ambient storage temperature	-20 to 65°C										
General specifications	Ambient operating humidity	20% to	90% (RH	) with no	condens	ation						
	Vibration	5.9 m/s	(0.6 G) 1	0 to 55 ⊢	Iz Compl	ies with J	ISC0911					
	Location	At a ma	ximum al	titude of	1,000 m	(without c	orrosive	gases or	dust)			
	Cooling method	Self-coc	oling									


\* Built-in resistors are equipped with thermal fuses. If the alarm is not connected, the fuse may blow to prevent burnout due to overheating. If the fuse blows, the built-in resistor will need to be replaced.

#### **Dimensions (Unit: mm)**


#### 3G3AX-RBA

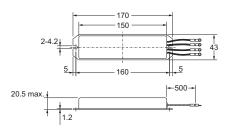

3G3AX-RBB

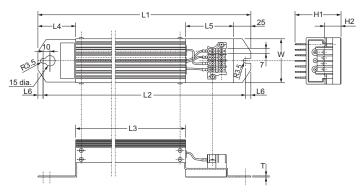


3G3AX-RBC4001

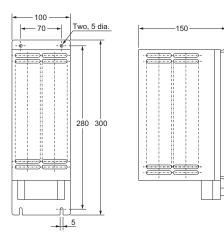



Model		I	Dimensio	ons (mm	)	
woder	L1	L2	L3	L4	L5	L6
3G3AX-RBB2001	310	295	160	55	70	7.5
3G3AX-RBB2002	310	295	160	55	70	7.5
3G3AX-RBB3001	470	455	320	55	70	7.5
3G3AX-RBB4001	435	422	300	50	60	6.5
Madal	[	Dimensi	ons (mm	)	Weight	Screw
Model	E H1	Dimensio H2	ons (mm W	) T	Weight (kg)	Screw size
Model 3G3AX-RBB2001			· ·	í –	•	
	H1	H2	Ŵ	Т	(kg)	size
3G3AX-RBB2001	<b>H1</b> 67	<b>H2</b> 12	<b>W</b> 64	<b>T</b> 1.6	(kg) 0.97	

#### 3G3AX-RBC6001

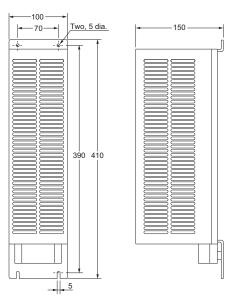


#### 3G3AX-RBC12001

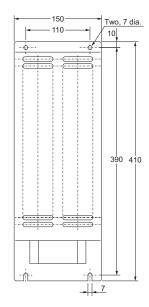




#### Radio Noise Filter 3G3AX-ZCL□

Connected to the inverter input/output cables to reduce noise coming into the inverter from the power supply line and noise flowing from the inverter into the power supply line.

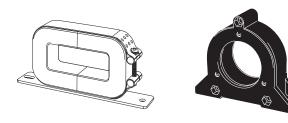

#### **Connection Example**



Note 1: Wind each of three phase wires in the same direction. 2: Can be used on both the input and output sides of the Inverter.

#### Specifications 3G3AX-ZCL2

Applicable		200 V	class		400 V class				
Inverter	In	put	ou	tput	In	put	output		
capacity (kW)	Quan- No. of tity turns		Quan- tity	No. of turns	Quan- tity	No. of turns	Quan- tity	No. of turns	
0.1	1	4	1	4					
0.2	1	4	1	4		_	_		
0.4	1	4	1	4	4 1		1	4	
0.75	1	4	1	4	1	4	1	4	
1.5	1	4	1	4	1	4	1	4	
2.2	1	4	1	4	1	4	1	4	
3.0	1	4	1	4	1	4	1	4	
3.7	1	4	1	4		_	_		
4.0		_		_	1	4	1	4	
5.5	1	3	1	3	1	4	1	4	
7.5	1	2	1	2	1	4	1	4	


Specifications 3G3AX-ZCL1

Applicable		200 V	class			400 V	class		
Inverter	In	put	ou	tput	In	put	output		
capacity (kW)	Quan- tity	No. of turns							
0.2	1	4	1	4		_		_	
0.4	1	4	1	4	1	4	1	4	
0.75	1	4	1	4	1	4	1	4	
1.5	1	4	1	4	1 4		1	4	
2.2	1	4	1	4	1	4	1	4	
3.0	1	4	1	4	1	4	1	4	
3.7	1	4	1	4		_	_		
4.0		_		_	1	4	1	4	
5.5	1	4	1	4	1	4	1	4	
7.5	1	4	1	4	1	4	1	4	
11	1	3	1	3	1	4	1	4	
15	1	2	1	2	1	4	1	4	


Note: Select options by the maximum applicable motor capacity of heavy and light load rating.

#### **Dimensions (Unit: mm)**

3G3AX-ZCL1

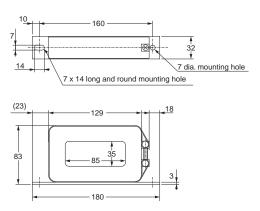


3G3AX-ZCL2

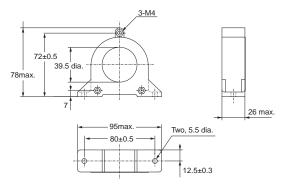

#### Input Noise Filter 3G3AX-NFI

Reduces noise coming into the inverter from the power supply line and noise flowing from the inverter into the power supply line. Connect as close to the Inverter as possible.



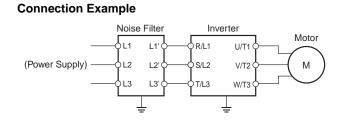

#### **Specifications**

Power supply	Model	Inverter model	Rated input current In (A) at an ambient temperature of 50°C	Power loss (W)	Leakage current (mA/phase) at 60 Hz
	3G3AX-NFI21	3G3MX2-A2001-V1	3×6 A	3	< 1.5 (250 V)
	3G3AX-NFI21	3G3MX2-A2002-V1	3×6 A	3	< 1.5 (250 V)
	3G3AX-NFI21	3G3MX2-A2004-V1	3×6 A	3	< 1.5 (250 V)
	3G3AX-NFI22	3G3MX2-A2007-V1	3 × 10 A	4	< 1.5 (250 V)
3-phase 200	3G3AX-NFI23	3G3MX2-A2015-V1	3 × 20 A	6	< 1.5 (250 V)
VÁC	3G3AX-NFI23	3G3MX2-A2022-V1	3 × 20 A	6	< 1.5 (250 V)
	3G3AX-NFI24	3G3MX2-A2037-V1	3 × 30 A	9	< 1.5 (250 V)
	3G3AX-NFI25	3G3MX2-A2055-V1	3 × 40 A	12	< 1.5 (250 V)
	3G3AX-NFI26	3G3MX2-A2075-V1	3 × 60 A	17	< 1.5 (250 V)
	3G3AX-NFI27	3G3MX2-A2110-V1	3 × 80 A	21	< 1.5 (250 V)
	3G3AX-NFI21	3G3MX2-AB001-V1	3×6 A	3	< 1.5 (250 V)
	3G3AX-NFI21	3G3MX2-AB002-V1	3×6 A	3	< 1.5 (250 V)
1 phase 200	3G3AX-NFI22	3G3MX2-AB004-V1	3 × 10 A	4	< 1.5 (250 V)
1-phase 200 - VAC	3G3AX-NFI23	3G3MX2-AB007-V1	3 × 20 A	6	< 1.5 (250 V)
	3G3AX-NFI24 3G3AX-NFI23*	3G3MX2-AB015-V1	3 × 30 A 3 × 20 A	9 6	< 1.5 (250 V)
	3G3AX-NFI24	3G3MX2-AB022-V1	3 × 30 A	9	< 1.5 (250 V)
	3G3AX-NFI41	3G3MX2-A4004-V1	3×7 A	2	< 7.5 (480 V)
	3G3AX-NFI41	3G3MX2-A4007-V1	3 × 7 A	2	< 7.5 (480 V)
	3G3AX-NFI41	3G3MX2-A4015-V1	3×7 A	2	< 7.5 (480 V)
	3G3AX-NFI42	3G3MX2-A4022-V1	3 × 10 A	4	< 7.5 (480 V)
3-phase 400	3G3AX-NFI42	3G3MX2-A4030-V1	3 × 10 A	4	< 7.5 (480 V)
VÁC	3G3AX-NFI43	3G3MX2-A4040-V1	3×20 A	6	< 7.5 (480 V)
-	3G3AX-NFI43	3G3MX2-A4055-V1	3 × 20 A	6	< 7.5 (480 V)
	3G3AX-NFI44	3G3MX2-A4075-V1	3 × 30 A	9	< 7.5 (480 V)
	3G3AX-NFI45	3G3MX2-A4110-V1	3×40 A	12	< 7.5 (480 V)
	3G3AX-NFI46	3G3MX2-A4150-V1	3 × 50 A	15	< 7.5 (480 V)

\* With the 3G3AX-NFI23, only the CT rating is supported.

Model	Case enclosure rating	Terminal size	Wire dia.	Weight (kg)
3G3AX-NFI21	Plastic, IP00	M4	1.25 mm <sup>2</sup>	0.5
3G3AX-NFI22	Plastic, IP00	M4	2 mm <sup>2</sup>	0.6
3G3AX-NFI23	Plastic, IP00	M4	2 mm <sup>2</sup> , 3.5 mm <sup>2</sup>	0.7
3G3AX-NFI24	Plastic, IP00	M4	5.5 mm <sup>2</sup>	0.8
3G3AX-NFI25	Plastic, IP00	M5	8 mm <sup>2</sup>	1.4
3G3AX-NFI26	Plastic, IP00	M5	14 mm <sup>2</sup>	1.8
3G3AX-NFI27	Metal, IP00	M6	22 mm <sup>2</sup>	3.6
3G3AX-NFI41	Plastic, IP00	M4	1.25 mm <sup>2</sup> , 2 mm <sup>2</sup>	0.7
3G3AX-NFI42	Plastic, IP00	M4	2 mm <sup>2</sup>	0.7
3G3AX-NFI43	Plastic, IP00	M4	2 mm <sup>2</sup> , 3.5 mm <sup>2</sup>	0.7
3G3AX-NFI44	Plastic, IP00	M4	5.5 mm <sup>2</sup>	0.8
3G3AX-NFI45	Plastic, IP00	M5	8 mm <sup>2</sup>	1.4
3G3AX-NFI46	Plastic, IP00	M5	14 mm <sup>2</sup>	1.6

Note: Select options by the maximum applicable motor capacity of heavy and light load rating.


E

©

EL

#### **Dimensions (Unit: mm)**

#### 3G3AX-NFI21 3G3AX-NFI22

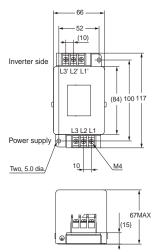


3G3AX-NFI25/3G3AX-NFI26 3G3AX-NFI45/3G3AX-NFI46


0

6


mmm


(95

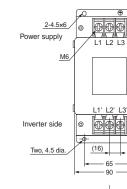





3G3AX-NFI23/3G3AX-NFI24 3G3AX-NFI41/3G3AX-NFI42 3G3AX-NFI43/3G3AX-NFI44

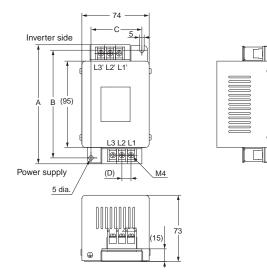

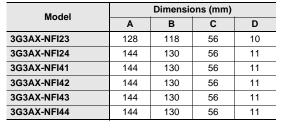

#### 3G3AX-NFI27

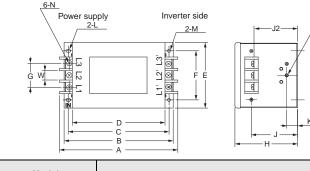



0

6


Model		Dimensions (mm)														
Woder	A B C D E F G H J J2 K L M N P							w								
3G3AX-NFI27	217	200	185	170	120	90	44	115	85	82	20	R2.75 Length 7	5.5 dia.	M6	M4	17

**Connection Example** 

#### Output Noise Filter 3G3AX-NFO

Reduces noise generated by the Inverter. Connect as close to the Inverter as possible.






#### Specifications

		Rated		Inverter model		Woight
Power supply	Model	current (A)	3-phase AC 200 V class	1-phase AC 200 V class	3-phase AC 400 V class	Weight (kg)
	3G3AX-NFO01	6	3G3MX2-A2001-V1 /-A2002-V1/-A2004-V1	3G3MX2-AB001-V1 /-AB002-V1 /-AB004-V1	3G3MX2-A4004-V1 /-A4007-V1	0.7
3-phase, 3-wire	3G3AX-NFO02	12	3G3MX2-A2007-V1 /-A2015-V1	3G3MX2-AB007-V1 /-AB015-V1	3G3MX2-A4015-V1 /-A4022-V1/-A4030-V1	0.9
Rated voltage 500 VAC	3G3AX-NFO03	25	3G3MX2-A2022-V1 /-A2037-V1	3G3MX2-AB022-V1	3G3MX2-A4040-V1 /-A4055-V1/-A4075-V1	2.1
	3G3AX-NFO04	50	3G3MX2-A2055-V1 /-A2075-V1	_	3G3MX2-A4110-V1 /-A4150-V1	3.7
	3G3AX-NFO05	75	3G3MX2-A2110-V1 /-A2150-V1	_	-	5.7

Note: Select options by the maximum applicable motor capacity of heavy and light load rating.

#### **Dimensions (Unit: mm)**

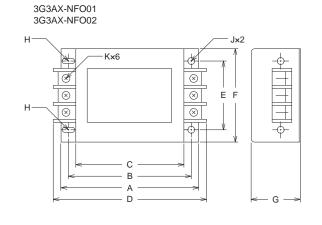

#### K×6 000 J×4 0 0 ¢ ¢ C A В ļ $|\underline{0}|\underline{0}|\underline{0}|$ F Е D G þ Ē 0 Þ

Model	Α	В	С	D	Е	F	G	Н	J	К	L
3G3AX-NFO01	140	125	110	156	70	95	50	R: 2.25mm Length: 6mm	4.5 mm dia.	M4	-
3G3AX-NFO02	160	145	130	176	80	110	70	R: 2.75mm Length: 7mm	5.5 mm dia.	M4	-
3G3AX-NFO03	112	80	154	160	145	130	120	-	6.5 mm dia.	M4	-
3G3AX-NFO04	162	100	210	200	180	160	150	-	6.5 mm dia.	M5	M5
3G3AX-NFO05	182	100	230	220	200	180	170	-	6.5 mm dia.	M6	M6


#### 3G3AX-NFO03/3G3AX-NFO04/3G3AX-NFO05


#### DC Reactor 3G3AX-DL

Used to suppress harmonic current generated from the Inverter.

Suppresses harmonic current better than the AC Reactor and can be used with the AC Reactor.

## Connection Example

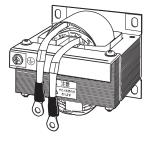



#### **Specifications**

		Inv	erter				DC	reactor spe	cifications	
Voltage class	Max. applicable motor capacity (kW)	Model	Heavy load: CT, Light load: VT mode	Max. applicable motor capacity (kW)	Rated input current (A)	Model	Inductance (mH)	Heat generation (W)	Operating ambient temperature/ humidity	Location
	0.1	3G3MX2-	Heavy load *	0.1	1.0	00047				
	0.1	A2001-V1	Light load	0.2	1.2	3G3AX- DL2002	21.4			
	0.2	3G3MX2-	Heavy load *	0.2	1.6	2 22002		8		
	0.2	A2002-V1	Light load	0.4	1.9	3G3AX-	10.7			
	0.4	3G3MX2-	Heavy load *	0.4	3.3	DL2004	10.7			
	0.4	A2004-V1	Light load	0.75	3.9	3G3AX-	6.75			
	0.75	3G3MX2-	Heavy load *	0.75	6.0	DL2007	0.75	10		
	0.75	A2007-V1	Light load	1.1	7.2	3G3AX-	3.51	10		
	4.5	3G3MX2- Heavy load * 1.5 9.0 DL2015	3.51			At an				
	1.5	A2015-V1	Light load	2.2	10.8	3G3AX-	0.54	10	10 to 50°C 20% to 90%	altitude of
2 nhaaa	2.2	3G3MX2-	Heavy load *	2.2	12.7	DL2022	2.51	13		1,000 m
3-phase 200-V	2.2	A2022-V1	Light load	3.0	13.9	3G3AX-	1.60	20		max.; indoors
class		2024/22	Heavy load *	3.7	20.5	DL2037	1.60	20		(without corrosive gases or dust)
	3.7	3G3MX2- A2037-V1	Light load	5.5	23.0	3G3AX- DL2055	1.11	26		
	5.5 3	3G3MX2- A2055-V1           3.5         3G3MX2- A2075-V1           3.5         3G3MX2- A2075-V1	Heavy load *	5.5	30.8					
	5.5		Light load	7.5	37.0	3G3AX- DL2075	0.84	36		
	7.5		Heavy load *	7.5	39.6	DL2075				
	7.5		Light load	11	48.0	3G3AX-	0.50	50		
		3G3MX2-	Heavy load *	11	57.1	DL2110	0.59	52		
	11	A2110-V1	Light load	15	68.0	3G3AX-	0.44	<u> </u>		
		000141/0	Heavy load *	15	62.6	DL2150	0.44	60		
	15	3G3MX2- A2150-V1	Light load	18.5	72.0	3G3AX- DL2220	0.30	63		
	0.1	3G3MX2-	Heavy load *	0.1	1.3					
	0.1	AB001-V1	Light load	0.2	2.0	3G3AX- DL2002	21.4			
	0.0	3G3MX2-	Heavy load *	0.2	3.0	DL2002		8		
	0.2	AB002-V1	Light load	0.4	3.6	3G3AX-	40.7			At an
		3G3MX2-	Heavy load *	0.4	6.3	DL2004	10.7			altitude of 1,000 m
Single-	0.4	AB004-V1	Light load	0.55	7.3	3G3AX-	0.75		–10 to 50°C	max.;
phase 200-V	0.75	3G3MX2-	Heavy load *	0.75	11.5	DL2007	6.75	10		indoors
Class	0.75	AB007-V1	Light load	1.1	13.8	3G3AX-	0.54	10	20% to 90%	(without corrosive
	4.5	3G3MX2-	Heavy load *	1.5	16.8	DL2015	3.51			gases or
	1.5	AB015-V1	Light load	2.2	20.2	3G3AX-	0.54			dust)
		2024/20	Heavy load *	2.2	22.0	DL2022	2.51	13		
	2.2	3G3MX2- AB022-V1	Light load	3.0	24.0	3G3AX- DL2037	1.60	20		

		Inv	erter				DC	reactor spe	cifications	
Voltage class	Max. applicable motor capacity (kW)	Model	Heavy load: CT, Light load: VT mode	Max. applicable motor capacity (kW)	Rated input current (A)	Model	Inductance (mH)	Heat generation (W)	Operating ambient temperature/ humidity	Location
	0.4	3G3MX2- A4004-V1	Heavy load *	0.4	1.8	3G3AX- DL4004	43.0			
		A4004-V1	Light load	0.75	2.1	3G3AX-	27.0			
	0.75	3G3MX2-	Heavy load *	0.75	3.6	DL4007	27.0	10		
	0.75	A4007-V1	Light load	1.5	4.3	3G3AX-	14.0			
	1.5	3G3MX2-	Heavy load *	1.5	5.2	DL4015	14.0		-10 to 50°C 20% to 90%	
	1.5	A4015-V1	Light load	2.2	5.9	3G3AX-	10.1	13		At an altitude of 1,000 m
	2.2	3G3MX2- A4022-V1	Heavy load *	2.2	6.5	DL4022	10.1	15		
	2.2		Light load	3.0	8.1					
	3.0	3G3MX2-	Heavy load *	3.0	7.7	3G3AX-	6.4	20		
3-phase 400-V	3.0	A4030-V1	Light load	4.0	9.4	DL4037	0.4			max.; indoors
class	4.0	3G3MX2-	Heavy load *	4.0	11.0					(without
	4.0	A4040-V1	Light load	5.5	13.3	3G3AX-	4.41	26		corrosive
	5.5	3G3MX2-	Heavy load *	5.5	16.9	DL4055	4.41	20		gases or dust)
	5.5	A4055-V1	Light load	7.5	20.0	3G3AX-	3.35	36		ddoty
	7.5	3G3MX2-	Heavy load *	7.5	18.8	DL4075	5.55			
	1.5	A4075-V1	Light load	11	24.0	3G3AX-	2.33	52		
	11	3G3MX2-	Heavy load *	11	29.4	DL4110	2.00	52		
		A4110-V1	Light load	15	38.0	3G3AX-	1.75	60		
		3G3MX2-	Heavy load *	15	35.9	DL4150	1.75	00		
	15	A4150-V1	Light load	18.5	44.0	3G3AX- DL4220	1.2	67		

\* The DC reactor model for the heavy-load mode is selected with reference to the rated current value of a general-purpose motor, which is 85% of the rated output current of the inverter. If you intend to constantly drive a motor whose rated current value exceeds 85% of the rated output current of the inverter, use the DC reactor model selected for the light-load mode.

# Multi-function Compact Inverter MX2-Series V1 type


#### Dimensions (Unit: mm)


Inverter			Applicable				Dim	nensio	ons (m	ım)				Standard
input power supply	Model	Fig. No.	Motor capacity (kW)	w	D	н	Α	в	x	Y	С	к	Weight (kg)	applicable wire
	3G3AX-DL2002		0.1, 0.2	66	90	98	-	85	56	72	5.2×8	M4	0.8	1.25 mm <sup>2</sup> min.
	3G3AX-DL2004		0.4	66	90	98	_	95	56	72	5.2×8	M4	1.0	1.25 mm <sup>2</sup> min.
	3G3AX-DL2007		0.55, 0.75	66	90	98	_	105	56	72	5.2×8	M4	1.3	2 mm <sup>2</sup> min.
	3G3AX-DL2015	- Fig. 1	1.1, 1.5	66	90	98	_	115	56	72	5.2×8	M4	1.6	2 mm <sup>2</sup> min.
3-phase/	3G3AX-DL2022		2.2	86	100	116	_	105	71	80	6×9	M4	2.1	2 mm <sup>2</sup> min.
1-phase 200	3G3AX-DL2037		3.0, 3.7	86	100	118	_	120	71	80	6×9	M4	2.6	3.5 mm <sup>2</sup> min.
VAC	3G3AX-DL2055		5.5	111	100	210	_	110	95	80	7×11	M5	3.6	8 mm <sup>2</sup> min.
	3G3AX-DL2075	Fig. 2	7.5	111	100	212	_	120	95	80	7×11	M6	3.9	14 mm <sup>2</sup> min.
	3G3AX-DL2110	- Fig. 2	11	146	120	252	_	110	124	96	7×11	M6	6.5	22 mm <sup>2</sup> min.
	3G3AX-DL2150	-	15	146	120	256	_	120	124	96	7×11	M8	7.0	38 mm <sup>2</sup> min.
	3G3AX-DL2220	Fig. 3	18.5	120	175	356	140	145	98	151	7×11	M8	9.0	60 mm <sup>2</sup> min.
	3G3AX- DL4004		0.4	66	90	98	_	85	56	72	5.2×8	M4	0.8	1.25 mm <sup>2</sup> min.
	3G3AX-DL4007		0.75	66	90	98	_	95	56	72	5.2×8	M4	1.1	1.25 mm <sup>2</sup> min.
	3G3AX-DL4015		1.5	66	90	98	_	115	56	72	5.2×8	M4	1.6	2 mm <sup>2</sup> min.
	3G3AX-DL4022	Fig. 1	2.2	86	100	116	_	105	71	80	6×9	M4	2.1	2 mm <sup>2</sup> min.
3-phase 400	3G3AX-DL4037		3.0	86	100	116	_	120	71	80	6×9	M4	2.6	2 mm <sup>2</sup> min.
VAC	3G3AX-DL4055		5.5	111	100	138	_	110	95	80	7×11	M4	3.6	3.5 mm <sup>2</sup> min.
	3G3AX-DL4075	1	7.5	111	100	138	_	115	95	80	7 × 11	M4	3.9	3.5 mm <sup>2</sup> min.
	3G3AX-DL4110	Fig. 2	11	146	120	250	_	105	124	96	7 × 11	M5	5.2	5.5 mm <sup>2</sup> min.
	3G3AX-DL4150	- Fig. 2	15	146	120	252	_	120	124	96	7×11	M6	7.0	14 mm <sup>2</sup> min.
	3G3AX-DL4220	Fig. 3	18.5	120	175	352	140	145	98	151	7×11	M6	9.5	22 mm <sup>2</sup> min.


Fig. 1





Fig. 3

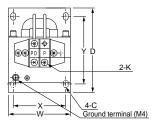

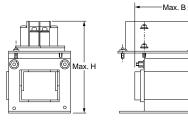




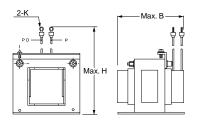

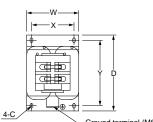




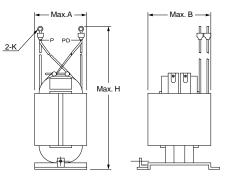


#### AC Reactor 3G3AX-AL

Connect the AC Reactor if the capacity of the power supply is much larger than that of the Inverter or the power factor is required to be improved.

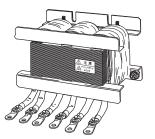

#### **Connection Example**




#### Specifications


		Inv	erter	AC reactor specifications						
Voltage class	Max. applicable motor capacity (kW)	Model	Heavy load: CT, Light load: VT mode	Max. applicable motor capacity (kW)	Rated input current (A)	Model	Inductance (mH)	Heat generation (W)	Operating ambient temperature/ humidity	Location
	0.1	3G3MX2-	Heavy load	0.1	1.0					
	0.1	A2001-V1	Light load	0.2	1.2	_				
	0.2	3G3MX2-	Heavy load	0.2	1.6	-				
		A2002-V1	Light load	0.4	1.9	3G3AX-	2.8	40		
	0.4	3G3MX2- A2004-V1	Heavy load Light load	0.4	3.3	AL2025	2.8	12		
		3G3MX2-	Heavy load	0.75 0.75	3.9 6.0	-				
	0.75	A2007-V1	Light load	1.1	7.2	-				<b>A</b> .
		3G3MX2-	Heavy load	1.5	9.0	-				At an altitude of
	1.5	A2015-V1	Light load	2.2	10.8				-	1,000 m
3-phase	0.0	3G3MX2-	Heavy load	2.2	12.7	3G3AX-	0.88	25	-10 to 50°C	max.;
200-V	2.2	A2022-V1	Light load	3.0	13.9	AL2055				indoors
class	3.7	3G3MX2-	Heavy load	3.7	20.5				20% to 90%	(without
	5.7	A2037-V1	Light load	5.5	23.0	3G3AX-	0.35	50		corrosive
	5.5	3G3MX2-	Heavy load	5.5	30.8	AL2110	0.00	50		gases or dust)
	0.0	A2055-V1	Light load	7.5	37.0				_	uusi)
	7.5	3G3MX2-	Heavy load	7.5	39.6					
		A2075-V1	Light load	11	48.0	3G3AX-		50		
	11	3G3MX2-	Heavy load	11	57.1	AL2220	0.18	50		
		A2110-V1	Light load	15	68.0	-				
	15	3G3MX2-	Heavy load	15	62.6	3G3AX-			-	
	15	A2150-V1	Light load	18.5	72.0	AL2330	0.09	85		
	0.1	3G3MX2-	Heavy load	0.1	1.3					
	0.1	AB001-V1	Light load	0.2	2.0					
	0.2	3G3MX2-	Heavy load	0.2	3.0	3G3AX-	2.8	12		At an
	0.2	AB002-V1	Light load	0.4	3.6	AL2025	2.0			altitude of 1,000 m max.;
Single-	0.4	3G3MX2-	Heavy load	0.4	6.3				-10 to 50°C	
phase		AB004-V1	Light load	0.55	7.3					indoors
200-V Class	0.75	3G3MX2- AB007-V1	Heavy load	0.75 1.1	11.5 13.8	3G3AX-	0.88	25	20% to 90%	(without
01033		3G3MX2-	Light load Heavy load	1.1	16.8	AL2055	0.00	25		corrosive
	1.5	AB015-V1	Light load	2.2	20.2					gases or
		3G3MX2-	Heavy load	2.2	22.0	3G3AX-	0.35	50		dust)
	2.2	AB022-V1	Light load	3.0	24.0	AL2110	0.00			
	~ 4	3G3MX2-	Heavy load	0.4	1.8					
	0.4	A4004-V1	Light load	0.75	2.1					
	0.75	3G3MX2-	Heavy load	0.75	3.6	3G3AX-	7.7	12		
	0.75	A4007-V1	Light load	1.5	4.3	AL4025	1.1	12		
	1.5	3G3MX2-	Heavy load	1.5	5.2					
	1.0	A4015-V1	Light load	2.2	5.9				_	<b>A t a a</b>
	2.2	3G3MX2-	Heavy load	2.2	6.5					At an altitude of
		A4022-V1	Light load	3.0	8.1	3G3AX-	3.5	25		1,000 m
3-phase	3.0	3G3MX2- A4030-V1	Heavy load	3.0 4.0	7.7 9.4	AL4055			-10 to 50°C	max.;
400-V		3G3MX2-	Light load Heavy load	4.0	9.4				-	indoors
class	4.0	A4040-V1	Light load	5.5	13.3				20% to 90%	(without
		3G3MX2-	Heavy load	5.5	16.9	3G3AX-		50		corrosive
	5.5	A4055-V1	Light load	7.5	20.0	AL4110				gases or dust)
		3G3MX2-	Heavy load	7.5	18.8	1				uusij
	7.5	A4075-V1	Light load	11	24.0	3G3AX-	0.74	00	-	
	4.4	3G3MX2-	Heavy load	11	29.4	AL4220	0.74	60		
	11	A4110-V1	Light load	15	38.0		4			
	15	3G3MX2-	Heavy load	15	35.9	3G3AX- AL4330		90		
	10	A4150-V1	Light load	18.5	44.0	/ LE /000				

#### **Dimensions (Unit: mm)**


Inverter		Applicable		Dimensions (mm)										Weight
input power supply	Model	motor capacity (kW)	Α	С	D	Е	н	H1	Х	Y	J	к	w	(kg)
	3G3AX-AL2025	0.1 to 1.5	120	82	60	40	150	94	50	67	6	4	9.5	2.8
3-phase	3G3AX-AL2055	2.2 to 3.7	120	98	60	40	150	94	50	75	6	4	9.5	4.0
200 VAC (Single-phase	3G3AX-AL2110	5.5, 7.5	150	103	70	55	170	108	60	80	6	5.3	12.0	5.0
200 VAC)	3G3AX-AL2220	11, 15	180	113	75	55	190	140	90	90	6	8.4	16.5	10.0
,	3G3AX-AL2330	18.5	180	113	85	60	230	140	125	90	6	8.4	22.0	11.0
	3G3AX-AL4025	0.4 to 1.5	130	82	60	40	150	94	50	67	6	4	9.5	2.7
	3G3AX-AL4055	2.2, 3.7	130	98	60	40	150	94	50	75	6	5	12.5	4.0
3-phase 400 VAC	3G3AX-AL4110	5.5, 7.5	150	116	75	55	170	106	60	98	6	5	12.5	6.0
	3G3AX-AL4220	11, 15	180	103	75	55	190	140	100	80	6	5.3	12.0	10.0
	3G3AX-AL4330	18.5	180	123	85	60	230	140	100	100	6	6.4	16.5	11.5


3G3AX-AL2025 3G3AX-AL2055

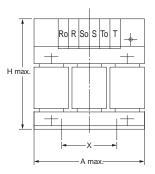





3G3AX-AL2110/3G3AX-AL2220 3G3AX-AL2330

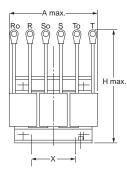





#### 3G3AX-AL4220/3G3AX-AL4330

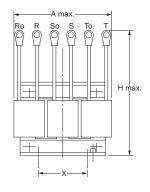



3G3AX-AL4025/3G3AX-AL4055 3G3AX-AL4110

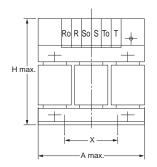




#### **Digital Operator**

Used to set parameters, perform various monitoring, and start and stop the Inverter.

### 3G3AX-OP01



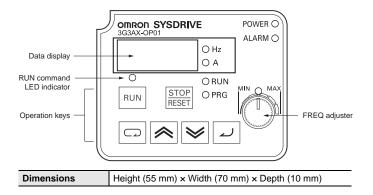

#### Digital operator extension cable 3G3AX-OPCN□

Used to install the Digital Operator away from the Inverter.



3G3AX-OPCN1 (Cable length: 1 m) 3G3AX-OPCN3 (Cable length: 3 m)

# **Ordering Information**

System Configuration	33
■ Interpreting Model Numbers	34
■ Ordering Information	34
3G3MX2 Inverter Models	34
Communication Unit	34
Related Options	35
Recommended EtherCAT Communications Cables	40
Software	41
Overview of Inverter Selection	42
■ Related Manuals	46

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products.


Windows is either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

 $\label{eq:thercare} \ensuremath{\mathsf{EtherCAT}}^{\circledast} \ensuremath{\mathsf{is}}\xspace \ensuremath{\mathsf{reg}}\xspace \ensuremath{\mathsf{R}}\xspace \ensuremath{\mathsf{reg}}\xspace \ensuremath{\mathsf{R}}\xspace \ensuremath{\mathsf{R$ 


Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

The product photographs and figures that are used in this catalog may vary somewhat from the actual products. Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

# **System Configuration**

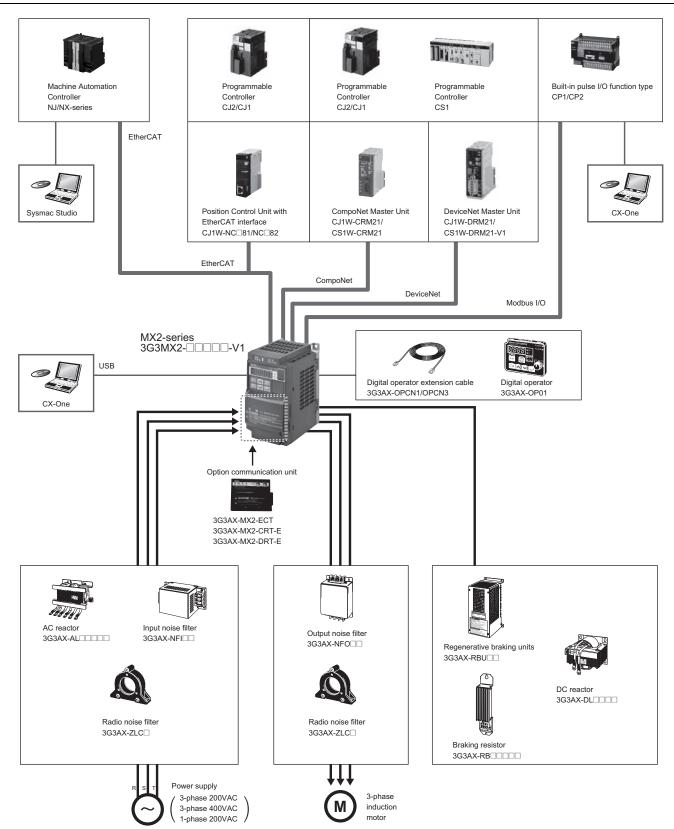

# **Interpreting Model Numbers**



MX2 Series V1 type

1) Voltage class

В	1-phase 200 VAC (200-V class)
2	3-phase 200 VAC (200-V class)
4	3-phase 400 VAC (400-V class)

2) Max. a	pplicable moto	r capacity (CT)
001	0.1 kW	
002	0.2 kW	
004	0.4 kW	
007	0.75 kW	
015	1.5 kW	
022	2.2 kW	
030	3.0 kW	
037	3.7 kW	
040	4.0 kW	
055	5.5 kW	
075	7.5 kW	
110	11 kW	
150	15 kW	

3) Area

-\/1	Japan and areas other
- V 1	than China and Europe
-ZV1	China
-E	Europe

# **Ordering Information**

#### **3G3MX2 Inverter Models**

Note: Inverters with model numbers ending in "-V1" are designed to be used in areas other than China and Europe. Refer to the above "Interpreting Model Numbers" for the model numbers for China and Europe.

Deted veltere		Max. applicable	motor capacity	Model
Rated voltage	Enclosure ratings	CT: Heavy load	VT: Light load	woder
		0.1kW	0.2 kW	3G3MX2-A2001-V1
		0.2 kW	0.4 kW	3G3MX2-A2002-V1
		0.4 kW	0.75 kW	3G3MX2-A2004-V1
		0.75 kW	1.1 kW	3G3MX2-A2007-V1
		1.5 kW	2.2 kW	3G3MX2-A2015-V1
3-phase 200 VAC	IP20	2.2 kW	3.0 kW	3G3MX2-A2022-V1
		3.7 kW	5.5 kW	3G3MX2-A2037-V1
		5.5 kW	7.5 kW	3G3MX2-A2055-V1
		7.5 kW	11 kW	3G3MX2-A2075-V1
		11 kW	15 kW	3G3MX2-A2110-V1
		15 kW	18.5 kW	3G3MX2-A2150-V1
		0.4 kW	0.75 kW	3G3MX2-A4004-V1
		0.75 kW	1.5 kW	3G3MX2-A4007-V1
		1.5 kW	2.2 kW	3G3MX2-A4015-V1
		2.2 kW	3.0 kW	3G3MX2-A4022-V1
3-phase 400 VAC	IP20	3.0 kW	4.0 kW	3G3MX2-A4030-V1
3-phase 400 VAC	IP20	4.0 kW	5.5 kW	3G3MX2-A4040-V1
		5.5 kW	7.5 kW	3G3MX2-A4055-V1
		7.5 kW	11 kW	3G3MX2-A4075-V1
		11 kW	15 kW	3G3MX2-A4110-V1
		15 kW	18.5 kW	3G3MX2-A4150-V1
		0.1 kW	0.2 kW	3G3MX2-AB001-V1
		0.2 kW	0.4 kW	3G3MX2-AB002-V1
1-phase 200 VAC	IP20	0.4 kW	0.55 kW	3G3MX2-AB004-V1
-pilase 200 VAC	IF 20	0.75 kW	1.1 kW	3G3MX2-AB007-V1
		1.5 kW	2.2 kW	3G3MX2-AB015-V1
		2.2 kW	3.0 kW	3G3MX2-AB022-V1

### **Communication Unit**

Name	Model
EtherCAT Communication Unit	3G3AX-MX2-ECT
CompoNet Communication Unit	3G3AX-MX2-CRT-E
DeviceNet Communication Unit	3G3AX-MX2-DRT-E

34

# **Related Options**

Name		Model	
Regenerative Braking Units	3-phase 200 VAC	General purpose with Braking resistor	3G3AX-RBU21
	3-phase 200 VAC	High Regeneration purpose with Braking resistor	3G3AX-RBU22
	3-phase 400 VAC	General purpose with Braking resistor	3G3AX-RBU41
		Resistor 120 W, 180 Ω	3G3AX-RBA1201
	Compact type	Resistor 120 W, 100 Ω	3G3AX-RBA1202
		Resistor 120 W, 5 Ω	3G3AX-RBA1203
		Resistor 120 W, 35 Ω	3G3AX-RBA1204
	Standard type	Resistor 200 W, 180 Ω	3G3AX-RBB2001
Braking Resistor		Resistor 200 W, 100 Ω	3G3AX-RBB2002
		Resistor 300 W, 50 Ω	3G3AX-RBB3001
		Resistor 400 W, 35 Ω	3G3AX-RBB4001
	Medium capacity type	Resistor 400 W, 50 Ω	3G3AX-RBC4001
		Resistor 600 W, 35 Ω	3G3AX-RBC6001
		Resistor 1200 W, 17 Ω	3G3AX-RBC12001

# Regenerative Braking Unit and Braking Resistor Combination

Inverter		Usage conditions		Regenerative braking unit		Braking resistor			Restrictions		
Voltage	Max.applicable motor capacity (kW)	Model	%ED *1 [%]	Approximate braking torque [% *2]	Model	Number of units	Model	Number of units	Connection configuration	Allowable continuous braking time(s)	Min. connectable resistance [Ω]
	0.1	3G3MX2-A2001-V1 3G3MX2-AB001-V1	3.0%	220%	Built-in Inverter		3G3AX-RBA1201	1	1	20	100
			10.0%	220%			3G3AX-RBB2001	1	1	30	100
	0.2	3G3MX2-A2002-V1	3.0%	220%	Built-in Inverter		3G3AX-RBA1201	1	1	20	100
		3G3MX2-AB002-V1	10.0%	220%			3G3AX-RBB2001	1	1	30	100
	0.4	3G3MX2-A2004-V1	3.0%	220%	Built-in Inverter		3G3AX-RBA1201	1	1	20	100
	0.4	3G3MX2-AB004-V1	10.0%	220%			3G3AX-RBB2001	1	1	30	100
	0.75	3G3MX2-A2007-V1 3G3MX2-AB007-V1	3.0%	120%	Built-in Inverter		3G3AX-RBA1201	1	1	20	50
			10.0%	120%			3G3AX-RBB2001	1	1	30	50
	1.5	3G3MX2-A2015-V1 3G3MX2-AB015-V1	2.5%	110%	Built-in Inverter		3G3AX-RBA1202	1	1	12	50
			10.0%	215%			3G3AX-RBC4001	1	1	10	50
	2.2	3G3MX2-A2022-V1 3G3MX2-AB022-V1	3.0%	150%	Built-in Inverter		3G3AX-RBB3001	1	1	30	35
200-V Class			10.0%	150%			3G3AX-RBC4001	1	1	10	35
	3.7	3G3MX2-A2037-V1	3.0%	125%	Built-in Inverter		3G3AX-RBB4001	1	1	20	35
			10.0%	125%			3G3AX-RBC6001	1	1	10	35
	5.5	3G3MX2-A2055-V1	3.0%	120%	Built-in Inverter		3G3AX-RBB3001	2	2	30	20
			10.0%	120%			3G3AX-RBC4001	2	2	10	20
	7.5	3G3MX2-A2075-V1	3.0%	125%	Built-in Inverter		3G3AX-RBB4001	2	2	20	17
			10.0%	125%			3G3AX-RBC6001	2	2	10	17
	11	3G3MX2-A2110-V1	3.0%	90%	- Built-in Inverter		3G3AX-RBC12001	1	1	10	17
			10.0%	90%			3G3AX-RBC12001	1	1	10	17
			10.0%	125%	3G3AX-RBU23 *3	1	3G3AX-RBC6001	3	14	10	4
	15	3G3MX2-A2150-V1	3.0%	110%	Built-in Inverter		3G3AX-RBB3001	5	7	30	10
			10.0%	110%			3G3AX-RBC4001	5	7	10	10

## Multi-function Compact Inverter MX2-Series V1 type


Inverter		Usage conditions		Regenerative braking unit		Braking resistor		Connection	Restrictions		
Voltage	Max.applicable motor capacity (kW)	Model	%ED *1 [%]	Approximate braking torque [% *2]	Model	Number of units	Model	Number of units	configuration	Allowable continuous braking time(s)	Min. connectable resistance [Ω]
	0.4	3G3MX2-A4004-V1	3.0%	220%	Built-in Inverter		3G3AX-RBA1201	2	3	20	180
			10.0%	220%			3G3AX-RBB2001	2	3	30	180
	0.75	3G3MX2-A4007-V1	3.0%	220%	Built-in Inverter		3G3AX-RBA1201	2	3	20	180
	0.75	3G3IVI72-A4007-V1	10.0%	220%			3G3AX-RBB2001	2	3	30	180
	1.5	3G3MX2-A4015-V1	3.0%	120%	Built-in Inverter		3G3AX-RBA1201	2	3	20	180
	1.5		10.0%	120%			3G3AX-RBB2001	2	3	30	180
	2.2	3G3MX2-A4022-V1	2.5%	150%	Built-in Inverter		3G3AX-RBA1202	2	3	12	100
			10.0%	220%			3G3AX-RBC4001	2	3	10	100
	3.0	3G3MX2-A4030-V1	2.5%	110%	Built-in Inverter		3G3AX-RBA1202	2	3	12	100
			10.0%	215%			3G3AX-RBC4001	2	3	10	100
400-V	4.0	3G3MX2-A4040-V1	3.0%	165%	Built-in Inverter		3G3AX-RBB3001	2	3	30	100
Class			10.0%	165%			3G3AX-RBC4001	2	3	10	100
	5.5	3G3MX2-A4055-V1	3.0%	120%	Built-in Inverter		3G3AX-RBB3001	2	3	30	70
			10.0%	120%			3G3AX-RBC4001	2	3	10	70
	7.5	3G3MX2-A4075-V1	3.0%	125%	Built-in Inverter		3G3AX-RBB4001	2	3	20	70
			10.0%	125%			3G3AX-RBC6001	2	3	10	70
	11	3G3MX2-A4110-V1	3.0%	85%	Built-in Inverter		3G3AX-RBB4001	2	3	20	70
			10.0%	85%			3G3AX-RBC6001	2	3	10	70
			10.0%	120%	3G3AX-RBU41 *3	1	3G3AX-RBC4001	4	15	10	34
	15	3G3MX2-A4150-V1	3.0%	125%	Built-in Inverter		3G3AX-RBB4001	4	5	20	35
			10.0%	125%			3G3AX-RBC6001	4	5	10	35

\*1 \*2 %ED shows the ratio that can be used for braking (deceleration time) among operating time of one task period.

Approximate breaking torque is shown in % of rating torque of the motor (100%).

\*3 Please remove the built-in resistor.

#### **Connection configuration**

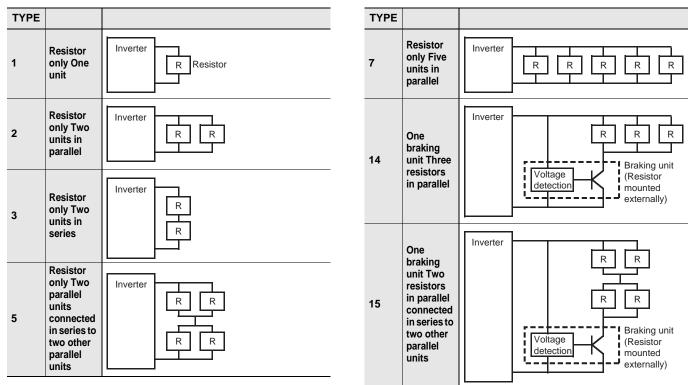

Name		Specifications of Inverter				
Name	Voltage class	CT: Heavy load	VT: Light load	Model		
		0.1 kW	0.2 kW			
		0.2 kW	0.4 kW			
		0.4 kW	0.75 kW			
		0.75 kW	1.1 kW	3G3AX-ZCL2		
		1.5 kW	2.2 kW			
	3-phase 200 VAC	2.2 kW	3.0 kW			
		3.7 kW	5.5 kW			
		5.5 kW	7.5 kW	- 3G3AX-ZCL1 (3G3AX-ZCL2		
		7.5 kW	11 kW			
		11 kW	15 kW	3G3AX-ZCL1		
		15 kW	18.5 kW			
		0.1 kW	0.2 kW			
		0.2 kW	0.4 kW			
adio Noise Filter		0.4 kW	0.55 kW			
	1-phase 200 VAC	0.75 kW	1.1 kW	- 3G3AX-ZCL2		
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW			
		0.4 kW	0.75 kW			
		0.75 kW	1.5 kW			
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW	3G3AX-ZCL2 (3G3AX-ZCL1		
		3.0 kW	4.0 kW			
	3-phase 400 VAC	4.0 kW	5.5 kW			
		5.5 kW	7.5 kW			
		7.5 kW	11 kW			
				2024X 7014		
		11 kW	15 kW	3G3AX-ZCL1		
		15 kW	18.5 kW			
		0.1 kW	0.2 kW	3G3AX-NFI21		
		0.2 kW	0.4 kW			
		0.4 kW	0.75 kW			
		0.75 kW	1.1 kW	3G3AX-NFI22		
		1.5 kW	2.2 kW	3G3AX-NFI23		
	3-phase 200 VAC	2.2 kW	3.0 kW			
		3.7 kW	5.5 kW	3G3AX-NFI24		
		5.5 kW	7.5 kW	3G3AX-NFI25		
		7.5 kW	11 kW	3G3AX-NFI26		
		11 kW	15 kW	3G3AX-NFI27		
		15 kW	18.5 kW	3G3AX-NFI28		
		0.1 kW	0.2 kW	3G3AX-NFI21		
		0.2 kW	0.4 kW			
nput Noise Filter	1-phase 200 VAC	0.4 kW	0.55 kW	3G3AX-NFI22		
		0.75 kW	1.1 kW	3G3AX-NFI23		
		1.5 kW	2.2 kW	3G3AX-NFI23 *		
		2.2 kW	3.0 kW	3G3AX-NFI24		
		0.4 kW	0.75 kW			
		0.75 kW	1.5 kW	3G3AX-NFI41		
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW			
		3.0 kW	4.0 kW	3G3AX-NFI42		
	3-phase 400 VAC	4.0 kW	5.5 kW			
		5.5 kW	7.5 kW	- 3G3AX-NFI43		
		7.5 kW	11 kW	3G3AX-NFI44		
		11 kW	15 kW	3G3AX-NFI45		
		1 1 1XVV	10 101			

\* Only the CT rating is supported.

# Multi-function Compact Inverter MX2-Series V1 type

News		Specifications of Inverter				
Name	Voltage class	CT: Heavy load	VT: Light load	Model		
		0.1 kW	0.2 kW			
		0.2 kW	0.4 kW	3G3AX-NFO01		
		0.4 kW	0.75 kW			
		0.75 kW	1.1 kW	3G2AX NEO02		
	2 phase 200 V/AC	1.5 kW	2.2 kW	3G3AX-NFO02		
	3-phase 200 VAC	2.2 kW	3.0 kW			
		3.7 kW	5.5 kW	3G3AX-NFO03		
		5.5 kW	7.5 kW			
		7.5 kW	11 kW	3G3AX-NFO04		
		11 kW	15 kW	3G3AX-NFO05		
		0.1 kW	0.2 kW			
		0.2 kW	0.4 kW			
	1 phone 000 1/4 0	0.4 kW	0.55 kW			
utput Noise Filter	1-phase 200 VAC	0.75 kW	1.1 kW	3G3AX-NFO02		
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW	3G3AX-NFO03		
		0.4 kW	0.75 kW			
		0.75 kW	1.5 kW	3G3AX-NFO01		
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW	3G3AX-NFO02		
		3.0 kW	4.0 kW			
	3-phase 400 VAC	4.0 kW	5.5 kW			
		5.5 kW	7.5 kW	3G3AX-NFO03		
		7.5 kW	11 kW			
		11 kW	15 kW			
		15 kW	18.5 kW	- 3G3AX-NFO04		
		0.1 kW	0.2 kW	3G3AX-DL2002		
		0.2 kW	0.4 kW	3G3AX-DL2004		
		0.4 kW	0.75 kW	3G3AX-DL2007		
		0.75 kW	1.1 kW	3G3AX-DL2015		
		1.5 kW	2.2 kW	3G3AX-DL2022		
	3-phase 200 VAC	2.2 kW	3.0 kW	3G3AX-DL2037		
		3.7 kW	5.5 kW	3G3AX-DL2055		
		5.5 kW	7.5 kW	3G3AX-DL2075		
		7.5 kW	11 kW	3G3AX-DL2110		
		11 kW	15 kW	3G3AX-DL2150		
		15 kW	18.5 kW	3G3AX-DL2220		
		0.1 kW	0.2 kW	3G3AX-DL2002		
		0.2 kW	0.4 kW	3G3AX-DL2004		
CReactor		0.4 kW	0.55 kW	3G3AX-DL2007		
	1-phase 200 VAC	0.75 kW	1.1 kW	3G3AX-DL2015		
		1.5 kW	2.2 kW	3G3AX-DL2022		
		2.2 kW	3.0 kW	3G3AX-DL2037		
		0.4 kW	0.75 kW	3G3AX-DL4007		
		0.75 kW	1.5 kW	3G3AX-DL4015 *		
		1.5 kW	2.2 kW	3G3AX-DL4022		
		2.2 kW	3.0 kW			
		3.0 kW	4.0 kW	3G3AX-DL4037		
	3-phase 400 VAC	4.0 kW	5.5 kW	3G3AX-DL4055		
		5.5 kW	7.5 kW	3G3AX-DL4035 *		
		7.5 kW	11 kW	3G3AX-DL4073		
		11 kW	15 kW	3G3AX-DL4110		
		15 kW	18.5 kW	3G3AX-DL4130		

# Multi-function Compact Inverter MX2-Series V1 type

Name		Specifications of Inverter				
Name	Voltage class	CT: Heavy load	VT: Light load			
		0.1 kW	0.2 kW			
		0.2 kW	0.4 kW	3G3AX-AL2025		
		0.4 kW	0.75 kW			
		0.75 kW	1.1 kW			
		1.5 kW	2.2 kW	3G3AX-AL2055		
	3-phase 200 VAC	2.2 kW	3.0 kW	3G3AX-AL2055		
		3.7 kW	5.5 kW	3G3AX-AL2110		
		5.5 kW	7.5 kW	3G3AX-AL2110 *		
		7.5 kW	11 kW	3G3AX-AL2220		
		11 kW	15 kW	3G3AX-AL2220 *		
		15 kW	18.5 kW	3G3AX-AL2330		
		0.1 kW	0.2 kW			
	1-phase 200 VAC	0.2 kW	0.4 kW			
Reactor		0.4 kW	0.55 kW	3G3AX-AL2025		
		0.75 kW	1.1 kW			
		1.5 kW	2.2 kW	3G3AX-AL2055 *		
		2.2 kW	3.0 kW	3G3AX-AL2110		
		0.4 kW	0.75 kW	3G3AX-AL4025		
		0.75 kW	1.5 kW			
		1.5 kW	2.2 kW			
		2.2 kW	3.0 kW	3G3AX-AL4055		
	2 share 400 \/AC	3.0 kW	4.0 kW	-		
	3-phase 400 VAC	4.0 kW	5.5 kW	3G3AX-AL4110		
		5.5 kW	7.5 kW	3G3AX-AL4110 *		
		7.5 kW	11 kW	3G3AX-AL4220		
		11 kW	15 kW	3G3AX-AL4220 *		
		15 kW	18.5 kW	3G3AX-AL4330		

\* Only the CT rating is supported. Note: When using the Inverter for light load rating, select the model with one size larger capacity (rated current).

Name	Cable length(m)	Model
Digital Operator	-	3G3AX-OP01
Connection cable	1m	3G3AX-OPCN1
Connection cable	3m	3G3AX-OPCN3

## **Recommended EtherCAT Communications Cables**

Use Straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (braiding and aluminum foil tape) for EtherCAT.

## **Cable with Connectors**

Item	Appearance	Recommended manufacturer	Cable length(m) *1	Model
Cable with Connectors on Both Ends			0.3	XS6W-6LSZH8SS30CM-Y
(RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs type *1			1	XS6W-6LSZH8SS100CM-Y
Wire Gauge and Number of Pairs: AWG26, 4-pair cable		OMRON	2	XS6W-6LSZH8SS200CM-Y
Cable Sheath material: LSZH *2	A.		3	XS6W-6LSZH8SS300CM-Y
Cable color: Yellow *3	4		5	XS6W-6LSZH8SS500CM-Y
Cable with Connectors on Both Ends	Connectors on Both Ends		0.3	XS5W-T421-AMD-K
(RJ45/RJ45)		OMRON	0.5	XS5W-T421-BMD-K
Rugged RJ45 plugs type *1			1	XS5W-T421-CMD-K
Wire Gauge and Number of Pairs:			2	XS5W-T421-DMD-K
AWG22, 2-pair cable			5	XS5W-T421-GMD-K
Cable color: Light blue			10	XS5W-T421-JMD-K
Cable with Connectors on Both Ends			0.5	XS5W-T421-BMC-SS
(M12 Straight/RJ45) Shield Strengthening Connector cable *4			1	XS5W-T421-CMC-SS
M12/Smartclick Connectors		OMBON	2	XS5W-T421-DMC-SS
Rugged RJ45 plugs type		OMRON	3	XS5W-T421-EMC-SS
Wire Gauge and Number of Pairs: AWG22, 2-pair cable			5	XS5W-T421-GMC-SS
Cable color: Black			10	XS5W-T421-JMC-SS

\*1 Standard type cables length 0.2, 0.3, 0.5, 1, 1.5, 2, 3, 5, 7.5, 10, 15 and 20 m are available. Rugged type cables length 0.3, 0.5, 1, 2, 3, 5, 10 and 15 m are available. For details, refer to Cat.No.G019.

\*2 The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

\*3 Cables colors are available in blue, yellow, or Green.

\*4 For details, contact your OMRON representative.

## **Cables / Connectors**

## Wire Gauge and Number of Pairs: AWG24, 4-pair Cable

Item	Appearance	Recommended manufacturer	Model
Cables	-	Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 x 4P CP *
	-	Kuramo Electric Co.	KETH-SB *
RJ45 Connectors	-	Panduit Corporation	MPS588-C *

\* We recommend you to use above cable and connector together.

#### Wire Gauge and Number of Pairs: AWG22, 2-pair Cable

Item	Appearance	Recommended manufacturer	Model
Cables	-	Kuramo Electric Co.	KETH-PSB-OMR *
Cables	-	JMACS Japan Co., Ltd.	PNET/B *
RJ45 Assembly Connector		OMRON	XS6G-T421-1 *

\* We recommend you to use above cable and connector together.

## Software

## How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

Item	Omron PLC System	Omron Machine Automation Controller System
Controller CS, CJ, CP, and other series		NJ/NX-series
Inverter	Inverter MX2-series V1 type Inverter MX2-series V1 type with EtherCAT Communication Unit (Applicable to the CJ series only.) Inverter MX2-series V1 type with CompoNet Communication Unit Inverter MX2-series V1 type with DeviceNet Communication Unit	Inverter MX2-series V1 type Inverter MX2-series V1 type with EtherCAT Communication Unit Inverter MX2-series V1 type with CompoNet Communication Unit Inverter MX2-series V1 type with DeviceNet Communication Unit
Software FA Integrated Tool Package CX-One		Automation Software Sysmac Studio

## FA Integrated Tool Package CX-One

					Standards
Product name	Specifications	Number of licenses	Media	Model	
FA Integrated Tool Package CX-One Ver. 4.⊡	The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components. CX-One runs on following OS. Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/ 64-bit version) / Windows 8.1 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) CX-One Version.4. includes CX-Drive Ver.2 For details, refer to the CX-One catalog (Cat. No. R134)	1 license *	DVD	CXONE-AL01D-V4	-

\* Multi licenses (3, 10, 30, or 50 licenses) and DVD media without licenses are also available for the CX-One.

## **Automation Software Sysmac Studio**

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

	Product name Specificatio		Number of licenses	Media	Model	Standards
integ debi cont		The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/NX-series CPU Units, NY-	_ (Media only)	Sysmac Studio (32 bit) DVD	SYSMAC-SE200D	-
	Sysmac Studio Standard Edition Ver.1.⊡⊡	series Industrial PC, EtherCAT Slave, and the HMI. Sysmac Studio runs on the following OS. *1 Windows 7 (32-bit/64-bit version) / Windows 8.1 (32- bit/64-bit version)/ Windows 10 (32-bit/64-bit version) / Windows 11 (64-bit version) The Sysmac Studio Standard Edition DVD includes	(Media only)	Sysmac Studio (64 bit) DVD	SYSMAC-SE200D-64	-
Sup Dev Sup Des	Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX- Designer). For details, refer to your OMRON website.	1 license *2	_	SYSMAC-SE201L	-	

\*1 Model "SYSMAC-SE200D-64" runs on Windows 10 (64 bit) or higher.
\*2 Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

## **Overview of Inverter Selection**

For detail of Inverter selection, refer to the MX2 series V1 type User's Manual. (Man.No.I585).

## **Motor Capacity Selection**

Before selecting an invertor, first the motor should be chosen.In selecting the motor, first calculate the load inertia for the applications, and then calculate the required capacity and torque.


# Make a simple selection (use Formulas for the required output power)

This method of calculation helps select a motor by calculating the output (W) required by the motor to maintain its regular rotations. It does not include calculation of the effect of acceleration/deceleration. Therefore, make allowance for the calculated value to select a motor. This calculation method can be applied to applications that operate constantly such as fans, conveyers, agitators etc.

This calculation method must not be applied to the following applications:

- •Those requiring instant start-up.
- •Those that frequently repeat operation and stop.
- •Those that have a large inertia at the power transfer part.
- •Those that have an inefficient power transfer part.

## For Straight-Line Operation: Normal Power PO (kW)



Po = <u>6120 ⋅ η</u> µ: Friction Coefficient W: Mass of Straight-Line travelling part (kg) Vℓ: Speed of Straight-Line Travelling part (m/min) η: Decelerator (Transfer part) Efficiency

µ.W.Vℓ

## For Rotating Operation: Normal Power PO (kW)



 $P_{o} (kW) = \frac{2\pi \cdot T\ell \cdot N\ell}{60 \cdot \eta} \times 10^{-3}$ 


 $\label{eq:load_shaft} \begin{array}{l} \mathbb{T} \, \ell : \mbox{Load} \mbox{ Torque} \ (\mbox{Load} \ Shaft) \ (N\cdot m) \\ \mathbb{N} \, \ell : \mbox{ Load} \ Shaft \ Rotation \ Speed \ (r/min) \\ \eta : \ Transfer \ part \ (\eta {\leq} 1) \end{array}$ 

## Detailed Selection Method (R.M.S Algorithm)

This method helps to select a motor by calculating the effective torque and maximum torque required to achieve a certain pattern of operation for the application. It selects a motor that is optimal for a particular operation pattern.

## Calculate the inertia with a Motor Shaft Conversion Value


Calculate inertias of all the components with the formula for inertia calculation shown below to convert them to a motor conversion value.

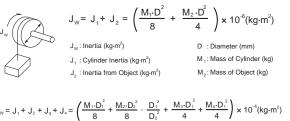




 $\begin{array}{l} J_w: \mbox{ Inertia (kg·m^2)} \\ J_1: Cylinder 1 \mbox{ Inertia (kg·m^2)} \\ J_2: \mbox{ Inertia from Cylinder 2 (kg·m^2)} \\ J_3: \mbox{ Inertia from Object (kg·m^2)} \\ J_4: \mbox{ Inertia from Belt (kg·m^2)} \end{array}$ 

- $$\begin{split} &\mathsf{D_1}: \mathsf{Cylinder 1 \ Diameter \ (mm)} \\ &\mathsf{D_2}: \mathsf{Cylinder 2 \ Diameter \ (mm)} \\ &\mathsf{M_1}: \mathsf{Mass \ of \ Cylinder 1 \ (kg)} \\ &\mathsf{M_2}: \mathsf{Mass \ of \ Cylinder 2 \ (kg)} \end{split}$$
- M<sub>3</sub>: Mass of Object (kg)
- M<sub>4</sub>: Mass of Belt (kg)



- $$\begin{split} J_{W} &= J_{1} + \left(\frac{D_{1}}{D_{2}}\right)^{2} J_{2} + \frac{M \cdot D_{1}^{2}}{4} \times 10^{-6} (kg \cdot m^{2}) \\ J_{W} &: \text{System Inertia} (kg \cdot m^{2}) \\ J_{1} &: \text{Roller 1 Inertia} (kg \cdot m^{2}) \end{split}$$
- J<sub>1</sub>: Roller 1 Inertia (kg·m<sup>2</sup>) J<sub>2</sub>: Roller 2 Inertia (kg·m<sup>2</sup>) D<sub>1</sub>: Roller 1 Diameter (mm) D<sub>2</sub>: Roller 2 Diameter (mm) M: Work Equivalent Mass (kg)



- $\begin{array}{l} {\sf J}_{L}: {\sf Load Inertia of Motor Shaft Conversion (kg·m²)}\\ {\sf J}_{W}: {\sf Load Inertia (kg·m²)}\\ {\sf J}_{1}: {\sf Gear Inertia on Motor Side (kg·m²)}\\ {\sf J}_{2}: {\sf Gear Inertia on Load Side (kg·m²)} \end{array}$
- $Z_1$ : Number of Gear Teeth on Motor Side


 $J_1 = J_1 + G^2 (J_2 + J_w) (kg \cdot m^2)$ 

Z2: Number of Gear Teeth on Load Side

## Calculate Motor Shaft Conversion Torque and Effective Torque

Calculate the acceleration torque from the load torque calculated from both the motor shaft conversion value and the motor rotor inertia. Then Combine this acceleration torque and the Load torque calculated from the friction force and the external force that are applied to the load. Now you get the required torque to operate a motor.


## Acceleration Torque



- $T_{\text{A}}$  : Acceleration/Deceleration Torque (N·m)
- J<sub>L</sub> : Motor Shaft Conversion Load Inertia (kg·m<sup>2</sup>)
- $J_M$  : Inertial of Motor Itself (kg·m<sup>2</sup>)  $\eta$  : Gear Transmission Efficiency
- N : Motor Rotation Speed (r/min)

## Motor Shaft Conversion Load Torque (External Force/Friction)

Time



Gear Transmission

Efficiency

 $T_w = F \cdot \frac{D}{2} \times 10^{-3} (N \cdot m)$ (Friction is generally,








Gear Ratio G =  $Z_1/Z_2$ 

## Calculation of Total Torque and Effective Torque

Effective Torque: TRMS (N·m)

$$= \sqrt{\frac{\Sigma(T_i)^2 \cdot t_i}{\Sigma t_i}} = \sqrt{\frac{T_1^2 \cdot t_1 + T_2^2 \cdot t_2 + T_3^2 t_3 + T_4^2 \cdot t_4}{t_1 + t_2 + t_3 + t_4}}$$

Maximum Torque:  $T_{MAX} = T_1 = T_A + T_L$ 

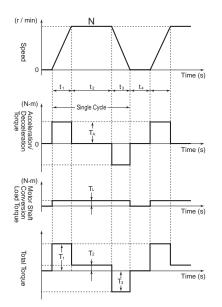

Note: Please make use of the Servo Motor selection software, which can calculate the motor shaft conversion inertia and effective/ maximum torque, as above.

## Motor Selection

Use the formula below to calculate the motor capacity from the effective torque and the maximum torque that were obtained above. Select the larger of the two generated values as the motor capacity. Select a motor the capacity of which is larger than the calculated value and makes allowance for an error.

Motor Capacity corresponding to Effective Torque

Motor Capacity (kW) = 1.048·N·T<sub>RMS</sub>·10<sup>-4</sup> N: Maximum Rotations (r/min)

 Motor Capacity capable of Providing Maximum Torque Motor Capacity (kW) = 1.048·N·T<sub>MAX</sub>·10<sup>-4</sup>/1.5 N: Maximum Rotations (r/min)

## **Inverter Capacity Selection**

Select an inverter that can be used for the selected motor in the process of "Motor Selection".

Generally, select an inverter which fits the maximum applicable motor capacity of the selected motor.

After selecting an inverter, check if it meets with all of the following conditions. If it does not, select an inverter that has a one class larger capacity and check the feasibility again.

# Motor Rated Current $\leq$ Inverter Rated Output Current Maximum Time of Continuous Torque Output Time in an Application $\leq$ 1 minute

Note: 1. Where the inverter overload capacity is "120% of Rated

Output Current for 1 minute", check it for 0.8 minute.
Where a 0 Hz sensor-less vector control is being used, or where torque must be maintained for 0 (r/min) rotation speed and where 150% of the rated torque is frequently required, use an invertor which is one rank larger than the one selected by the above method.

## **Outline of Braking Resistor Selection**


## Importance of Braking Resistor

If the regenerative energy generated in deceleration or descent in an application is too great, the main circuit of an inverter may have an increased voltage and it may be damaged.

Because the inverter usually contains the overvoltage LAD stop function, it is not actually damaged. However, the motor stops detecting an error, making a stable and continuous operation disabled. Therefore, you must discharge the regenerative energy outside of the inverter.

## •What is Regenerative Energy?

A load connected to a motor has kinetic energy when rotating, and potential energy when it is located in a high position. When the motor decelerates, or when the load descends, the energy is returned to an inverter. It is known as regeneration, and the energy generated by the phenomenon is known as regenerative energy.



### Preventing Breaking Resistence


The following are methods to prevent the connection of braking resistance.

These methods will make the deceleration time increase, so check if it will not cause problems.

- Enable the deceleration stall prevention (enabled in factory settings) (It will automatically increase deceleration time not to cause an overvoltage to stop the motor).
- Set a longer deceleration time. (Cause the regenerative energy to decrease per unit of time.)
- Disable Free-Run. (Prevent the regenerative energy from returning to an inverter.)

## Make a Simple Selection for Braking Resistors

It can be a simple selecting method by using the ratio of time in which regenerative energy is produced in a normal operating pattern. Calculate the usage ratio from the following operating pattern.



#### Usage Rate = t/T × 100 (% ED)

t : Deceleration Time (Regenerative Time) T : Single Cycle Operation Time

%ED is the unit used for a usage rate.


The usage rate is used as the ratio of deceleration time (regenerative operation time) to simplify the selection of the braking options.

## For Models with a Built-in Braking Circuit (3G3MX2 Max. 22 kW)

Select the braking resistor based on the usage rate calculated from the operation patterns.

Refer to the braking resistor list described in the User's manual and catalog, and connect it according to your Inverter. When the usage ratio for the braking resistor selected on the previous page exceeds 10% ED, or when an extremely large braking torque is required, use the method below to calculate a regenerative energy and make your selection.

## Calculation of Required Braking Resistor

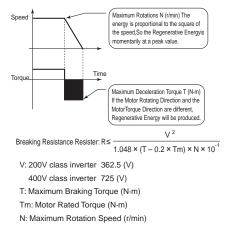


Note: Calculate a braking torque using the above "Motor Capacity Selection".

#### Calculation of Average Regenerative Energy

Regenerative Energy is produced when the motor rotation direction and the torque direction are opposite.

Use the following formula to calculate a regenerative energy per cycle interval.

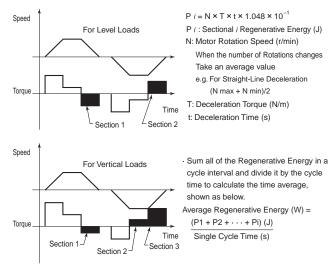

- **Note: 1.** Forward rotation direction is forward for the speed, and the torque in the forward rotation direction is forward for the torque.
  - Calculate a braking torque using the above "Motor Capacity Selection".

#### Braking Resistor Selection

Select a Braking Resistor from the required braking resistance and average regenerative energy on the left.

- Required Braking Resistence ≥ Resistence of Braking Resistor ≥ Minimum Connection Resistence of Invertor or Regenerative Braking Unit
- Average Regenerative Energy ≤ Permissible Power for Braking Resister
- Note: 1. If a resistance that has a less then the minimum connectable value is connected on an inverter or regenerative braking resistor unit, the internal breaking transistor can be damaged. When the required braking resistance is less than the minimum connectable resistance, change the inverter or regenerative energy braking to the one having a larger capacity and a minimum connection resistance less than the required braking resistance.
  - Two or more regenerative braking units can be operated in parallel. Refer to the following formula to know the braking resistance value in such a case.
     Braking Resistance (0) = (Required Braking Resistance as
    - Braking Resistence( $\Omega$ ) = (Required Braking Resistance as calculated above) × (No. of Units in use)
  - **3.** Do not use the above formula to select a generative braking resistance value. 150W does not reflect a permissible power capacity, but the maximum rated power per unit of resistance. The actual permissible power varies according to a resistance.

# Multi-function Compact Inverter MX2-Series V1 type

## **Related Manuals**

Man. No. Model		Manual
1585		Multi-function Compact Inverter MX2 series V1 type USER'S MANUAL
1580	3G3MX2-□□□□-V1	Drive Programming USER'S MANUAL
1570	3G3MX2-000	Multi-function Compact Inverter MX2-series USER'S MANUAL
1574	3G3AX-MX2-ECT	MX2 series / MX2 series V1 type/ RX series V1 type EtherCAT Communication Unit USER'S MANUAL
1581	3G3AX-MX2-DRT-E	MX2 series / MX2 series V1 type/ RX series V1 type DeviceNet Communication Unit USER'S MANUAL
1582	3G3AX-MX2-CRT-E	MX2 series / MX2 series V1 type/ RX series V1 type CompoNet Communication Unit USER'S MANUAL
W463	CXONE-AL D-V	CX-One FA Integrated Tool Package Setup Manual
W453	CXONE-ALD-V/WS02-DRVC01	CX-Drive OPERATION MANUAL
W504	SYSMAC-SE2	Sysmac Studio Version 1 Operation Manual

# **Terms and Conditions Agreement**

## Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

## Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

## Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

## Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Note: Do not use this document to operate the Unit.

**OMRON Corporation** Industrial Automation Company

Kyoto, JAPAN

Contact : www.ia.omron.com

#### **Regional Headquarters**

**OMRON EUROPE B.V.** Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

OMRON ASIA PACIFIC PTE. LTD. 438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011 Fax: (65) 6835-2711 **OMRON ELECTRONICS LLC** 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2220 Fax: (86) 21-5037-2200 Authorized Distributor:

©OMRON Corporation 2009-2023 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM\_14\_16 Cat. No. I920-E1-08 0123 (0909)