

PATLITE Corporation

Drawing No.	Rev.	Page
LA6-5DSNWB-POE-W18	G	2/9

1. General Specifications

Model			LA6-5DSNWB-POE	
Rated Voltage		ge	24 VDC	
		hernet (PoE)	48 VDC	
Operating Voltage Range		(/	Rated Voltage ±10%	
Power Over Ethernet (PoE)			36 to 57 VDC	
Rated Cur		Тур.	0.30 A (24 VDC supply): 0.18 A (PoE : 48 VDC supply) *1	
Consumpt		Max.	0.49 A (26.4 VDC supply): 0.26 A (PoE: 48 VDC supply) *1	
Rated Pov		Тур.	7.2 W (24 VDC supply): 8.6 W (PoE : 48 VDC supply) *1	
Consumpt		Max.	12.9 W (26.4 VDC supply): 12.5 W (PoE: 48 VDC supply) *1	
	Wire Cu		420 mA *1 / 70 mA *2 (26.4 VDC supply): 10 mA (PoE : 48 VDC supply) *1	
Operating An			-10°C to +50°C	
Operating /			Less than 90% RH (No condensation)	
Storage Am			-10°C to +50°C	
Storage A		· ·	Less than 90% RH (No condensation)	
	ing Loca		Indoors	
	ing Dire		Upright	
	ction Ra	0	IP20 (IEC 60529)	
		al Condition	Upright	
	on Resis		Not Applicable	
Insulatio	on Resis	stance	More than 1 M Ω at 500 VDC between live part and non-current carrying metallic part.	
Withstand Voltage		tano	500 VAC applied for 1min between live part and non-current carrying metallic part	
VVIUIS		laye	without breaking insulation.	
Mass (To	lerance	±10%)	780 g	
Outer	Dimens	ions	Refer to the Outer Dimensions Drawing.	
	ED Tiers		5	
Sound F	Pressure	Level	85 dB or more	
Envir	onmonto	al Condition	Maximum volume, Buzzer Sound No.1 measured from the front direction of	
	onnenta		the buzzer aperture at 1 m.	
	Dow	er/Contact	Screwless Terminal Block (Number of Contacts : 12)	
Interface			Power: 2 (24 VDC), Contact Input (External relay/NPN/PNP): 8,	
Intenace		Input	Flashing/Pulse Enable : 1; COM : 1	
		USB	USB micro-B Terminal USB 2.0	
Commur	vication I	Viathad	Ethernet (IEEE802.3 Conformity)	
Commun	lication	vietnoa	10BASE-T/100BASE-TX (Auto-MDI/MDIX)	
		LAN	RJ-45 Connector	
		PoE	Corresponds to IEEE802.3af Class 0 Conformity	
· · ·			Multi-function Button (Located in Head Cover)	
Operation Interface		пасе	Clear Switch	
la d'ante e			1 (Green): Built in Clear Switch	
Indicator			*Always on when Power is applied.	
Accessory		1	Rubber Sheet	
Optional Parts			Wallmount Bracket (NH-WST2)	
Connectable LAN cable			Category 5e or higher (Both straight cable and cross cable types can be used)	
00111000			*1 Environmental Condition : Lighting all tiers Yellow,	
Remarks			sounding Buzzer sound No.1 at maximum volume.	
			*2 Environmental Condition : Only lighting tier 1 yellow with no sound.	

Г


		- 5 -		
		LA6-5DSNWB-POE-W18	G	3/9
Conformity Standards	FCC Pa	RoHS Directive (EN IEC 63000) 61000-6-4, EN 61000-6-2, EN55032 art 15 Subpart B Class A, ICES-003 KC (KN 61000-6-4, KN 61000-6-2) CSA C22.2 No. UL60950-1-07 Reco (File No.E480103)	Class	Â
Remarks Conforms to the CE Requirements Conforms to the UKCA Requirements				

Drawing No.

Rev.


Page


2. Model Number Configuration

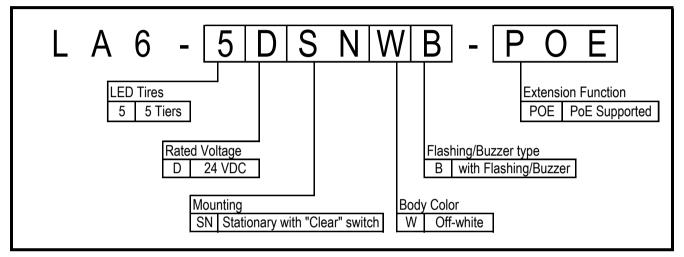


3.Wiring Diagram


3.1. Wiring Example

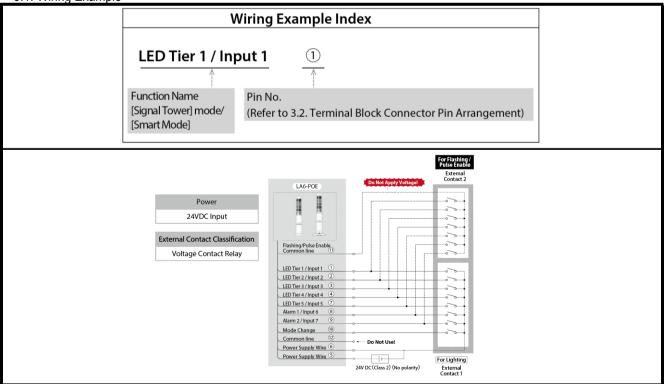



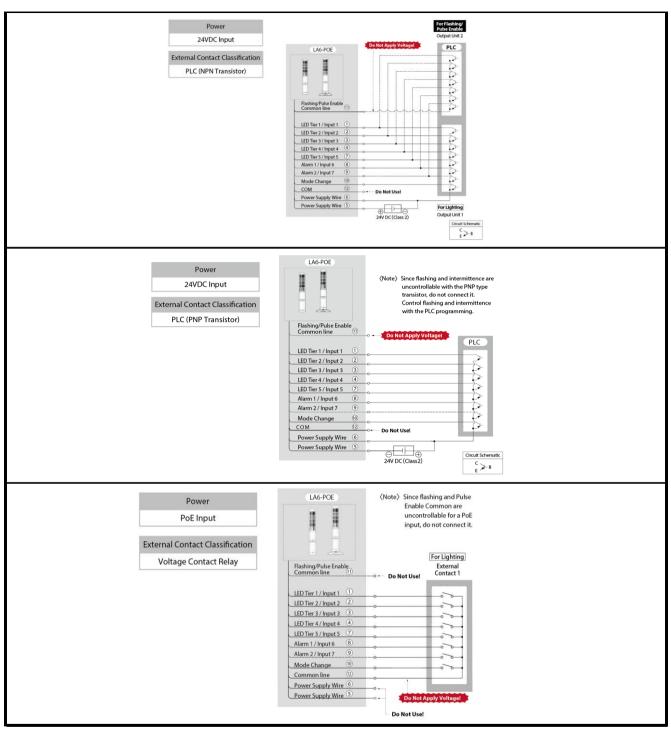

3.2. Terminal Block Connector Pin Arrangement

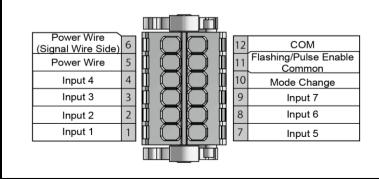

Recommended I	lead wire	e specifications	
---------------	-----------	------------------	--

Wire Type	UL1007/UL1430	
Wire Gauge (Solid Wire)	0.2-1.5 mm²	
Wire Gauge (Frayed Wire)	AWG24-16	
Temperature rating should be above 75°C, and		

the conductor material should be of copper wire.

Drawing No.	Rev.	Page
LA6-5DSNWB-POE-W18	G	5/9

4.Operating Specifications

4.1.Notification Specifications

All states and states	.Notification opconications			
Sign	al Tower Mode	Signal Tower LED and buzzer can be controlled with registered color and sound.		
	LED Unit Control	Each tier can be controlled with Continuous Lighting, Flashing, Lights-off		
	Display Color Variations	9 Colors		
	Buzzer Sound	Select one from buzzer sounds No. 1, No. 2 and from No. 3 to No. 11		
Sma	rt Mode	Information such as "Takt time" and "Time count" can be notified.		
	Smart Mode types	"Single-display Type", "Time-trigger Type" and "Pulse-trigger Type"		
	Single-display Type	The registered pattern can be executed.		
	Time-trigger Type	The pattern transitions can be controlled in accordance to time.		
	Pulse-trigger Type	The pattern transitions can be controlled in accordance to a pulse-trigger input.		
	Display Color Variations	21 Colors		
	Buzzer Sound	11 Patterns		
Deta	iled Command Control	Control by using commands to specify display color and buzzer pattern for each stage.		
	LED Control	Continuous Lighting, Flashing, Lights-off can be controlled for each Tier.		
	Display Color Variations	9 Colors		
	Buzzer Sound	11 Patterns		
Indiv	idual Flashing Control	The color and operation pattern of each tier of the LED unit		
		and the alarm pattern can be controlled.		
	LED Control	Continuous Lighting, Flashing, Lights-off can be controlled individually for each Tier.		
	Display Color Variations	9 Colors		
	Buzzer Sound	2 Patterns (buzzer sounds No. 1 and No. 5)		

4.2. Signal Tower Specification

Flashing Rate	30±2 Flashes per Minute, 60±2 Flashes per Minute, 120±2 Flashes per Minute	
Luminous Intensity (typ) *1	Red (1,000 mcd), Yellow (1,700 mcd), Green (2,600 mcd), Blue (1,000 mcd),	
	White (1,250 mcd), Purple (800 mcd), Pink (850 mcd),	
	Lemon yellow (2,150 mcd), Sky-blue (2,150 mcd)	
Remarks	*1 Due to the characteristics of the LED elements, a variation in difference of	
	the color tone and brightness of every product may occur.	

4.3. Buzzer Specification

Buzzer Sound (Typic	cal Frequency)	11 Patterns
	No.1	2400 Hz Continuous beep sound
	No.2	2400 Hz Rapid intermittent beep (0.05 sec. sound / 0.05 sec. silence)
	No.3	2400 Hz Long intermittent beep (1.5 sec. sound / 1.5 sec. silence)
	No.4	2400 Hz Fast intermittent beep (0.5 sec. sound / 0.5 sec. silence)
	No.5	3600 Hz Continuous beep Sound
	No.6	3600 Hz Rapid intermittent beep (0.05 sec. sound / 0.05 sec. silence)
	No.7	3600 Hz Long intermittent beep (1.5 sec. sound / 1.5 sec. silence)
	No.8	3600 Hz Fast intermittent beep (0.5 sec. sound / 0.5 sec. silence)
	No.9	2400 Hz & 3375 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)
	No.10	2400 Hz & 3600 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)
	No.11	4000 Hz & 4800 Hz Multiplexed Beep (0.25 sec. / 0.25 sec.)

Drawing No.	Rev.	Page
LA6-5DSNWB-POE-W18	G	6/9

Mute	Silence the buzzer sound while the smart mode is executed.
STOP	Temporarily pause pattern transition while executing the Time-trigger in Smart Mode *1
	Display a dedicated pattern while executing the Time-trigger in Smart Mode *1
Clear	Stop execution of the patterns in the Smart Mode and resume from the first pattern. *2
	Turn off the Signal Tower and stop the Buzzer. *3
Pulse Trigger	Execute transition of patterns in Smart Mode.
Remarks *1 Select any of them.	
	*2 Executable only when controlling signal wires.
	*3 Executable only by controlling from commands.

4.4 Contact Input Specifications

5.Function Specification

5.1 Main Unit Control Function

Signal	Wire Control	Controllable in the Signal Tower Mode or Smart Mode
Command Control Select from Modbus/TCP, HTTP, Socket Communication.		Select from Modbus/TCP, HTTP, Socket Communication.
	Modbus/TCP	Controllable with Modbus/TCP.
	HTTP/HTTPS	Controllable with HTTP Command.
	Socket Communication	Controllable with PNS Command/PHN Command.
Contact Input		Mute, STOP, Clear, Pulse Trigger can be controlled.

	Controllable Action						
Signal Tower	Smart	Detailed	Clear	Mute	STOP	Pulse	
	Mode	Command Control				Input	
✓ *1	 ✓ 	-	~	~	~	~	
>	v	✓	~	>	>	 ✓ 	
>	~	✓	~	>	>	v	
~	~	 ✓ 	 ✓ 	~	~	 ✓ 	
✓ *2	-	-	-	-	-	-	
-	-	-	~	~	~	~	
	Mode *1 *1 * *	Mode Mode ✓ *1 ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓	Signal Tower Smart Detailed Mode Mode Command Control ✓ *1 ✓ – ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓	Signal Tower ModeSmart ModeDetailed Command ControlClear✓ *1✓-✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓	Signal Tower ModeSmart ModeDetailed Command ControlClearMute✓ *1✓-✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓	Signal Tower ModeSmart ModeDetailed Command ControlClearMuteSTOP✓ *1✓-✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓✓	

*1 Can sound three buzzer patterns.

*2 Control Flashing and lighting for Tier 1 to Tier 3; Control Buzzer pattern sound No. 1 and No. 2.

5.2 Main Unit Status Acquisition Function

Modbus/TCP	Current status of Signal Tower, Buzzer, Contact Input can be acquired.
Socket Communication	Current status of Signal Tower, Buzzer, Contact Input
	by PNS Command/PHN Command can be acquired.
HTTP/HTTPS	Current status of Signal Tower, Buzzer, Contact Input
	and Firmware Version can be acquired by HTTP Command.

		Acquisition data						
Commond	LED Unit	D	Smart Mode	Contact	Color	MAC Address	Firmware	
Command		Buzzer	Status	Input	Information	MAC Address	Version	
Modbus/TCP	~	~	~	~	~	-	-	
PNS Command	~	~	~	~	✓ *3	~	-	
PHN Command	✓ *1	✓ *2	-	-	-	-	-	
HTTP Command	~	~	 ✓ 	~	~	~	✓ *4	

*1 Tier 1 to Tier 3 Lighting, Flashing, Lights-off status can be acquired.

*2 Buzzer pattern No.1 and No.2 can be acquired.

*3 RGB color code can be acquired.

*4 LED Unit Firmware Version and LAN Unit Firmware Version can be acquired.

Drawing No.	Rev.	Page
LA6-5DSNWB-POE-W18	G	7/9

5.3 Status Transmission Function					
Information Status	Transmit the present status of the Signal Tower from the controlled signal wire.				
Transmission Function					
Number of registrable destinations	1				
Communication method	Socket Communication				
Transmission data	Details				
Signal Tower status information	Continuous Lighting, Flashing, Lights-off				
Smart Mode status information	Group Number, Mute Input, STOP Input, Pattern Number				
Other information	MAC address of this product, LED Unit color information, Last pattern received information				

5.3 Status Transmission Function

5.4 Link Function

Mirroring	Can transmit status data of a Master LA6-POE to other LA6-POE and control
	that same status.
Number of registrable destinations	8

5.5 Main Unit Setting Function

Automatic Network Setting	Network setting in this product can communicate with			
	a DHCP server to be set automatically.			
LED Color Setting	The LED color of the Signal Tower can be changed by the signal wire			
-	by setting it with the web browser or Multi-function Button.			
Volume Control	The Buzzer Volume can be set with the web browser or Multi-function Button.			
Clear Function	The "Clear" function can be controlled by the "Clear" Button on this product.			
Main Unit Setting	Various settings to the Main Unit can be accessed by the web browser.			
Configuration Setting	Various configurations of the Main Unit can be read and written as setting files.			
Supported Setting Languages	Japanese, English			
Supported Application	EDITOR for LA series			
	LA6-POE Configurator software.			
	*Visit our company's home page and download the latest application software for free.			

[Handling Precaution]

About the handling of this product

• This product (including software) is shipped only after undergoing strict quality controls and inspections. However, should you encounter any issues, please contact your PATLITE sales representative.

This product (including software) is developed, designed and manufactured for general usage, such as office use, personal use, standard industry, and other related systems. Do not use, either directly or indirectly, in applications where a high level of safety is required, such as where human life is involved. We shall not be held liable for any damages or losses, nor be held responsible for any claims by a third party, as a result of using this product.
The suitability of this product in the system, with other machines and equipment, shall be tested and confirmed by the customer. We assume no responsibility regarding this. Design safety into the system to cope with misoperation, misuse, going offline, and other unforeseen operation of this product.

• We bear no responsibility for damages, lost opportunities, lost profits, compensation for accidents, or other costs including but not limited to personnel, construction, transportation, and shipping costs, related to using this product. We bear no responsibility for defects in other products, regardless of the other product's connection to this product (such as a communication line), or for the cost of repairing damages, losses, defects, or recovering lost data related to using the other products, including but not limited to personnel, construction, transportation, and shipping costs.

• To improve the functionality in the software for this product, we will update the software at our own discretion. We bear no responsibility for the results of software updates, such as damages, lost opportunities, lost profits, compensation for accidents, or other costs including but not limited to personnel, construction, transportation, and shipping costs, related to using this product. We bear no responsibility for defects in other products, regardless of the other product's connection to this product (such as a communication line), or for the cost of repairing damages, losses, defects, or recovering lost data related to using other products, including but not limited to personnel, construction, transportation, and shipping costs.

• Note the following statements regarding the software for this product, which require prior written consent from PATLITE:

- * Do not duplicate the software for this product.
- * Do not alter, combine, reverse-engineer, decompile, or disassemble the software for this product.
- * Do not license, rent, or resell the software for this product to a third party.
- * Do not store the software of this product on a network so it can be transmitted to a third party.
- * Do not remove the copyright notice or other trademark and company rights attached to the software for this product.

Things you should always do for your safety

• Do not disassemble or modify the product. Failure to do so may lead to product malfunction or cause fire or electrocution.

• Avoid spilling liquids (such as water or chemicals) into this product. Avoid dropping foreign metallic objects (such as copper wire) into this product. Failure to follow these instructions could result in electric shock or equipment damage.

• Do not drop or hit this product. Failure to follow these instructions could result in electric shock or equipment damage.

• Do not pull strongly the cable to be connected, or use damaged cable. It becomes a disconnection or a short circuit, and this product or connected equipment may be broken or it may cause ignition.

• Do not apply too much force to switches and buttons on this product. Failure to follow this instruction could result in equipment damage.

Installation

• Turn off the power when wiring, inspecting, or repairing this product. Failure to follow this instruction could result in equipment damage.

• Do not install in locations near fire, or environments with high temperature and humidity. Do not install this product where corrosive or flammable gas is present.

Do not install on an unstable surface. Failure to follow these instructions could result in injury or equipment damage.

• This product is rated for indoor use only. Please install and use this product indoors only.


- Avoid the following locations for installation of this product.

- * Places exposed to direct sunlight.
- * Places near fire or environments with high temperatures and humidity.
- * Environments where temperature changes are severe, and where there is condensation.
- * Environments with poor breathability and ventilation.
- * Places where external vibrations are directly transmitted to this product.
- * Environments where corrosive gas is present.
- * Locations exposed to salty sea air.
- * Locations near strong magnetic fields.
- * Environments where there is dust, iron powder, and so on.
- * Environments where chemicals and oil mist are present.

About maintenance

• Do not clean this product with volatile chemicals such as benzine or thinners, or with chemical wiping cloths as it could damage the product.

- Clean this product with a soft, dry cloth.
- If the dry cloth is unable to clean off any dirt and grime, wipe the product firmly with a slightly water-moistened cloth.

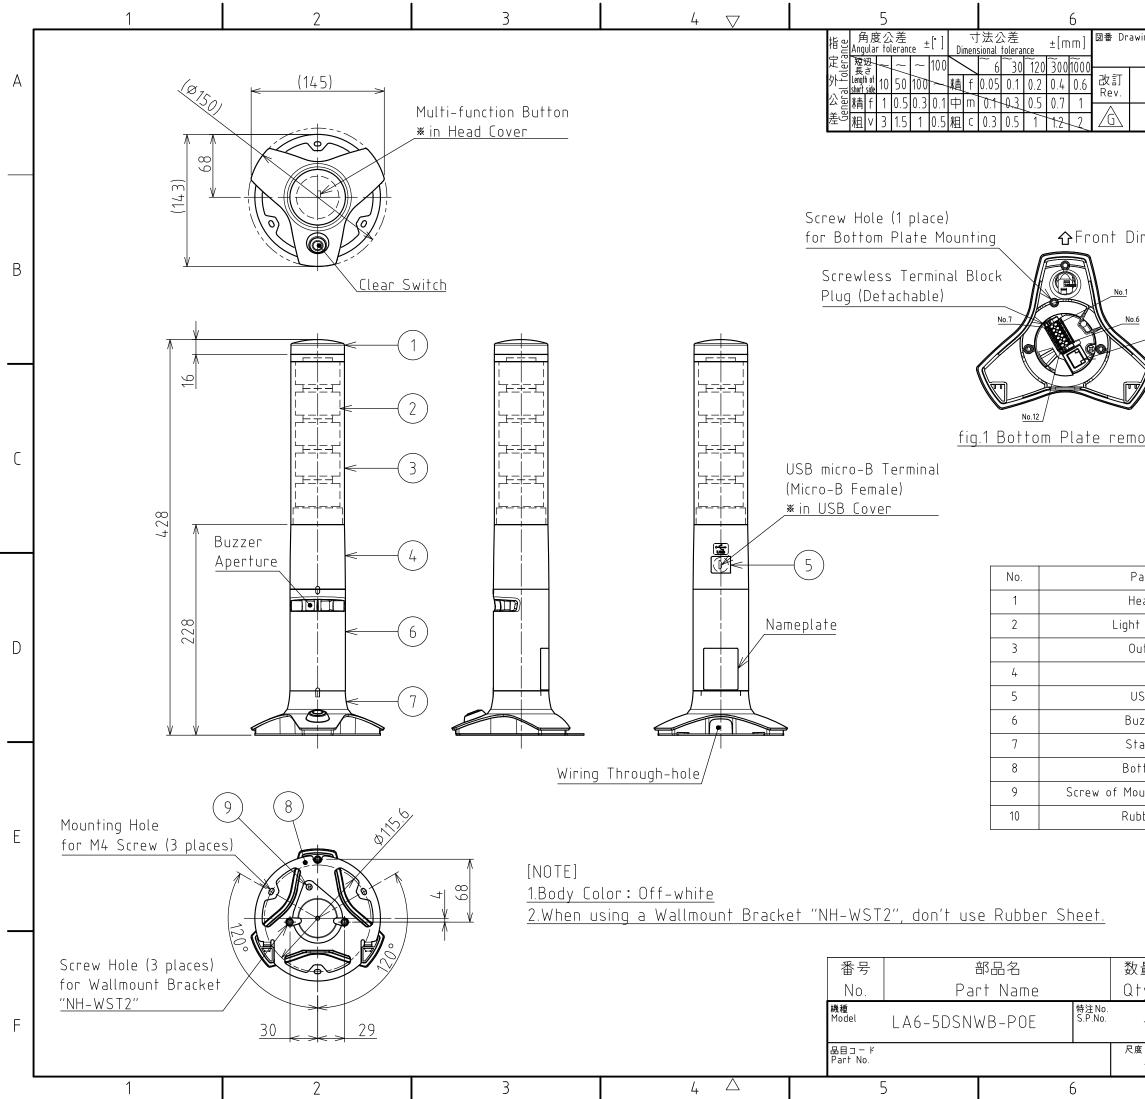

	7		8	
wing No.	NWB-POE-W1	10	ページ Page	
EA0-5D31 年月日		o 夏 歴	9/9	
Date	Revisio	RS LE I		А
)irection(B	uzzer Apei	rture)		
				В
<u>6</u> DI/EC	<u>onnector</u>			
<u>RJ-4J (</u>	UTITELTU			
\mathbb{N}			(10)	
<u>noved</u> <u>fic</u>	<u>j.2 Explanatory</u>	diagram :	for Accessory	C
				С
Part Name		Material		
lead Cover		ABS		
nt Guide Lens		PMMA		
)uter Lens		PC		D
Body		ABS		
USB Cover		ABS		
uzzer Case		ABS		
tand Cover		ABS		
ottom Plate		Steel		
ounting Botto		Steel		
ubber Sheet	F	Polyuretha	ane	
				E
女量		記事		
+			~	

て量	記事						
† y .	Remarks						
_	図名 ^{Name} Outer Dimensions Drawing						
度 Scale —	三角法 3rd Angle P.	単位 Unit mm		t パトラ- LITE Corpora			
		7		8	Ver.2.0		